


Navigation System

Navigation System

Upper display: Shows the audio system mode, frequency or track, volume, climate control status, and time.

Screen: The navigation screen for displaying information.

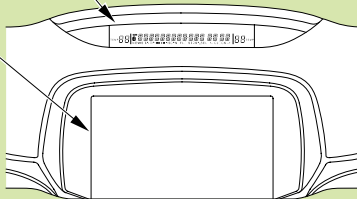


MAP/GUIDE button: Displays the map. When en route, switches the display between map and guidance screens.

AUDIO button: Displays the audio screen.

CANCEL button: Cancels the current screen and returns to the previous screen.

Display Mode button: Switches the display between Day mode, Night mode, and OFF.

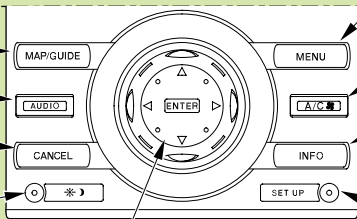

MENU button: Displays the "Enter Destination" by menu. When en route, displays the route options on the menu screen.

A/C button: Displays the climate control screen.

INFO button: Displays the screen for selecting Cellular Phonebook, Voice Command Help, Map Legend, Calendar, Calculator, and Key to Zagat Ratings.

SET UP button: Displays the setup screen.

 
Interface Dial/ENTER button: Moves left, right, up, and down to maneuver through menu choices, to scroll through a list, or to look around a displayed map. Push in to enter your selection.

Navigation System


Map Screen Legend

Map Orientation

(see the Navigation System Manual)



“Heading-Up”

 

“North-Up”

GPS Signal Strength

: Best Received
 : Good Received
(Displays nothing when no signal is received.)

“Breadcrumbs”

(see the Navigation System Manual)

Vehicle Position

(see the Navigation System Manual)


Map Scale

(see the Navigation System Manual)

Map Features

Dark Green: Park
Violet: Hospital
Brown: Shopping Mall
Green: Golf Course
Gray: Airport/Stadium/Business
Blue: Body of Water
Blue/Green: Cemetery
Matte Blue: University
(If you move the crosshairs over the polygon, the name will appear on the screen.)

Landmark Icon (see the Navigation System Manual)

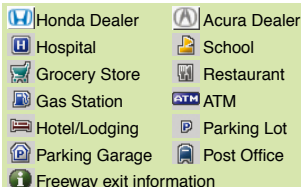

Traffic Icon



Streets


(see the Navigation System Manual)

Red: Interstates or Freeways
 Black: Verified Streets
 Light Brown: Unverified Streets

Current Street

Map Scale Adjustment

(Mile or km per half-inch appears only when you zoom in or out by rotating the Interface Dial.)

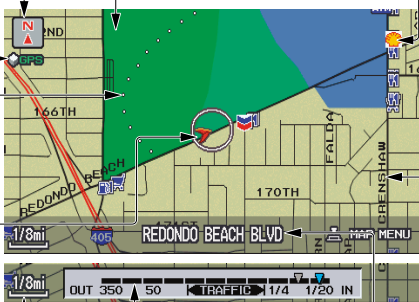

*NOTE: You can view the same information above by selecting **Map Legend** from the Information screen.*

Navigation System

Traffic Display

Incident Icons

Accident/Incident



Construction



Weather



Incident icon update details:


- Typically M-F 5:00 AM –7:00 PM (varies by metropolitan region)

Viewing Incident Details:

To view the incident details, use the interface dial to position the cursor (round red circle below) over an incident icon and push in.

Hearing Incident Details:

Push in the Interface Dial twice.

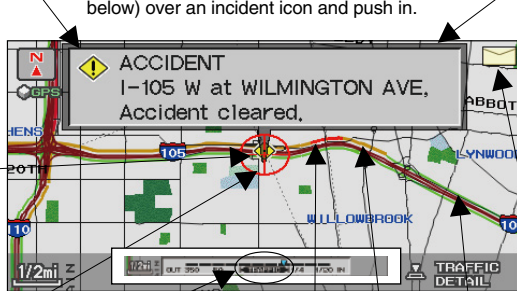

Cursor

Heavy traffic (red)

Moderate traffic (orange)

Free flow traffic (green)

Message icon

Indicates that you have a message. See the AcuraLink section.

Traffic Flow Data (where available)

Heavy traffic: 0 –27 mph (approximately)



Moderate traffic: 27 –52 mph (approximately)



Free flow traffic: 52+ mph (approximately)



Scroll Bar:

Traffic flow and incidents are only displayed for the following scales: 1/2, 1, 2, 5 mile (or 800 m, 1600 m, 3 km, 8 km). This is indicated by the black area under the scale.

Traffic Flow Data Update Details:

- Available 24 hrs a day, 7 days a week (not available in all metro traffic coverage areas)

Navigation System

Real-Time Traffic Display: The navigation screen can display up-to-the-minute traffic information when available including flow (traffic speed), accidents, and construction on freeways in major metro areas. The display of traffic flow and incidents on your map screen is optional and can be turned On/Off by selecting the "Traffic" icon on the Icon bar (see the Navigation Owner's Manual for details).

Viewing Flow Data: Traffic flow data is displayed as colored bands on either side of the highway (see the map diagram). The amount of flow data varies considerably from one city to another. You can only view traffic information in the city where you are located.

Note:

- *The displayed traffic flow may disagree with the information from other audio or Internet-based traffic displays.*

Viewing Incident Reports: Incident reports appear as small diamond shaped icons (see traffic map screen for examples). There are three ways to view traffic incidents from the map screen:

1. Using voice control, say "Display traffic incidents." Incidents (if any) are listed, with the closest shown first. When selected, a pop-up appears providing details of the incident.
2. Push in the interface dial and select the "Traffic Incidents" button from the Map Menu.
3. Use the interface dial to position the cursor (the round red circle) over the desired incident icon. Push in the interface dial to view the incident details, and push it a second time to hear the message.

Notes:

- *Incident reports may be displayed on roads that have no flow data available.*
- *Freeway incident reports can lag behind the actual incident, or remain displayed after an incident has cleared. This is normal.*
- *The displayed incidents may disagree with the information from other audio or internet based traffic information.*

Traffic Coverage: For the latest traffic coverage details for covered metropolitan areas, check www.acura.com/realtimetraffic for RL.

Navigation System

Compass System

Upper display: Shows the audio system mode, frequency or track, volume, climate control status, and the time.


Screen: The screen for displaying information.

COMPASS button: Displays the Compass screen.

AUDIO button: Displays the audio screen.

CANCEL button: Cancels the current screen and returns to the previous screen.

Display Mode button: Switches the display between Day mode, Night mode, and OFF.

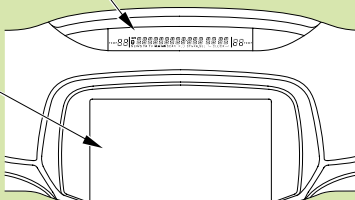


MENU button: Displays the main menu screen for Trip Computer, Calendar, Calculator, and Voice Command Help.

A/C button: Displays the climate control screen.

TRIP button: Displays the Trip Computer screen.

SET UP button: Displays the setup screen.

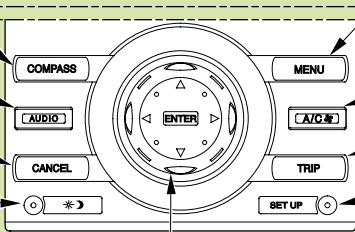

Interface Dial/ENTER button: Moves left, right, up, and down to maneuver through menu choices, or to scroll through a list. After making a selection, enter it by pushing in on the interface dial selector.

Navigation System

Compass System Operation


For a full explanation of each of the items on this page, see the Owner's Manual.

System Start-up

After the GLOBE and DISCLAIMER screens appear, select OK. If you do not select OK:


- The screen will go dark after 30 seconds.
- Some items in the information or setup screens will not be available.

Compass Screen

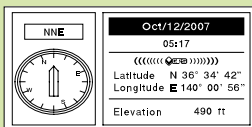


Displays the current latitude, longitude, and elevation. Press the Compass (Map/Guide) button, or say "Display map guide."

Main Menu

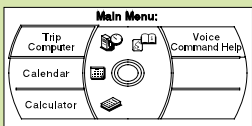


Allows you to select an optional feature from this screen. Press the Menu button, or say "Display menu."

Trip Computer

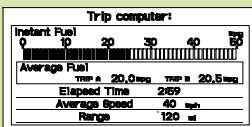


Displays various trip information: Instant fuel mileage, Average fuel mileage, Elapsed time, Average speed, and Range.

Calendar

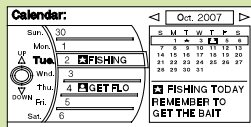


Allows you to enter events and be reminded of them in the future.

Calculator

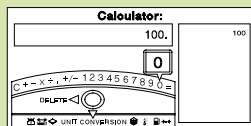

Allows you to do basic calculations, and unit conversion.

Voice Command Help

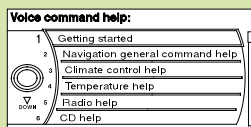

Various help menus are available from this screen. If you would like to view a tutorial on the voice command, select "Getting Started" on the list.