


BLUETOOTH® AUDIO (Tech/Advance Package)

Play audio files from your compatible phone through your vehicle's audio system. Visit www.acura.com/handsfreelink to check if this feature is available on your phone.

Playing Bluetooth Audio Files


1. Make sure your phone is on and paired to HandsFreeLink (See page 27).
2. Press USB/AUX repeatedly until "Bluetooth Audio" appears.
3. Press "play" on your phone; sound is redirected to the audio system. Make sure the phone's volume is adjusted.

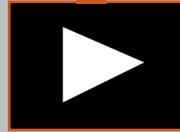

Skipping Bluetooth Audio Files

There are two ways to skip through audio files*:

- Press (⏮) or (⏭) on the audio control panel.
- Press (+) or (-) on the remote audio controls.

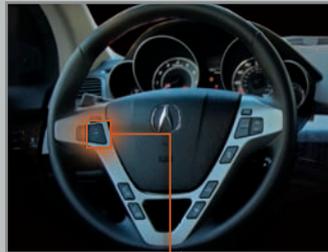

* not supported on all phones

iPod® or USB Flash Memory (Tech/Advance Package)

Play audio files from your compatible iPod or USB flash memory device through your vehicle's audio system. See your Owner's Manual for a list of compatible devices.

Connecting and Playing Audio Files

1. Open the center console, and pull out the USB adapter cable.
3. Push USB/AUX to begin playing.



2. Connect the USB connector to your iPod dock connector or flash drive.



iPod is a registered trademark of Apple Computer, Inc., registered in the U.S. and other countries. iPod not included.

Note Function (Tech/Advance Package)

Use the Note function to store up to 30 ten-second recordings of songs and song information from XM® Radio (with an active subscription).

Recording Song Samples

1. To record a song sample, press and hold XM for about 2 seconds.
3. Turn the selector knob to select "NOTE," then press ENTER.



2. To replay stored information, push the interface dial down.
4. Turn the selector knob to select a sound file, then press ENTER. The selected recording plays.



HARD DISC DRIVE (HDD) AUDIO (Tech/Advance Package)

Automatically record CDs onto your vehicle's hard drive (by system default). Songs begin to record once a CD is inserted into the disc slot.

Playing HDD Audio Files

1. Press AUDIO.



2. Press HDD.



3. The first song of the last recorded album plays. Press (▶) or (◀) or (+) or (-) to skip through songs.



Searching for Music

1. Push the selector up to select MUSIC SEARCH.



2. Select one of the categories.



3. Select a track and press ENTER to begin play.



SONG BY VOICE™ (SBV) (iPod®/HDD)

Play songs from your iPod and HDD from most navigation/audio screens by using simple voice commands.

Playing Audio Files using Voice Commands

Press and release the Talk button before you give a command.

Using the "Play" Command

Say "iPod search" or "HDD search."



Say "Play" and one of the options on the Search Mode screen. For example, say "Play Artist XYZ."



if exact match found

if exact match not found

The system provides voice feedback and lists possible matches.



Say the number of the corresponding selection you wish to play. For example, say "Four."



The system plays the selection and returns to the Search Mode screen.



Playing Audio Files using Voice Commands (continued)


Press and release the Talk button before you give a command.

Using the "List" Command

Say "iPod search" or "HDD search."



Say "List" and one of the options on the Search Mode screen. For example, say "List Artist XYZ."

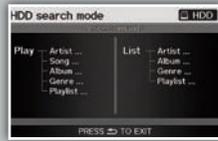

if exact match found

if exact match not found

A list of tracks from the selected artist displays.



The system provides voice feedback and lists possible matches.



Say the number of the artist. For example, say "Four."



Say the number of your selection. For example, say "One."



The system plays the selection and returns to the Search Mode screen.



REAR ENTERTAINMENT SYSTEM (RES) (if equipped)

Rear passengers can enjoy a different entertainment source than the front seat occupants. If listening to the same media source, both the driver and the rear passenger have the ability to control functions for that source.

Operating the RES from the Front Seat

1. Press REAR PWR; the DVD monitor automatically opens. Rear passengers hear audio through the wireless headphones.



3. Press REAR SOURCE to temporarily hear what is playing in the rear.



2. Press REAR CTRL OFF to disable rear audio controls.



4. Select a media source for the rear passengers. Press FRONT SOURCE to return to the front audio controls.



Operating the RES from the Rear Seat

1. From the front audio panel, make sure REAR PWR is on and rear control is not disabled.



3. Use the (▲)(▼)(◀)(▶) buttons to navigate the menu on the display. Press the ENT button to select a function.



2. From the rear control panel, press DVD/AUX, DISC/HDD, XM, or FM/AM to make a selection.



4. The rear control panel can be detached and used as a remote control. Press the RELEASE button to remove it from the ceiling.

