

MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the MID

When you start the engine, the MID shows the last active lower display from the previous drive cycle.




To toggle between the different displays:

- **Press** either Info button (▲/▼) for the main displays.
- **Press** SEL/RESET for the lower displays.



Main Displays

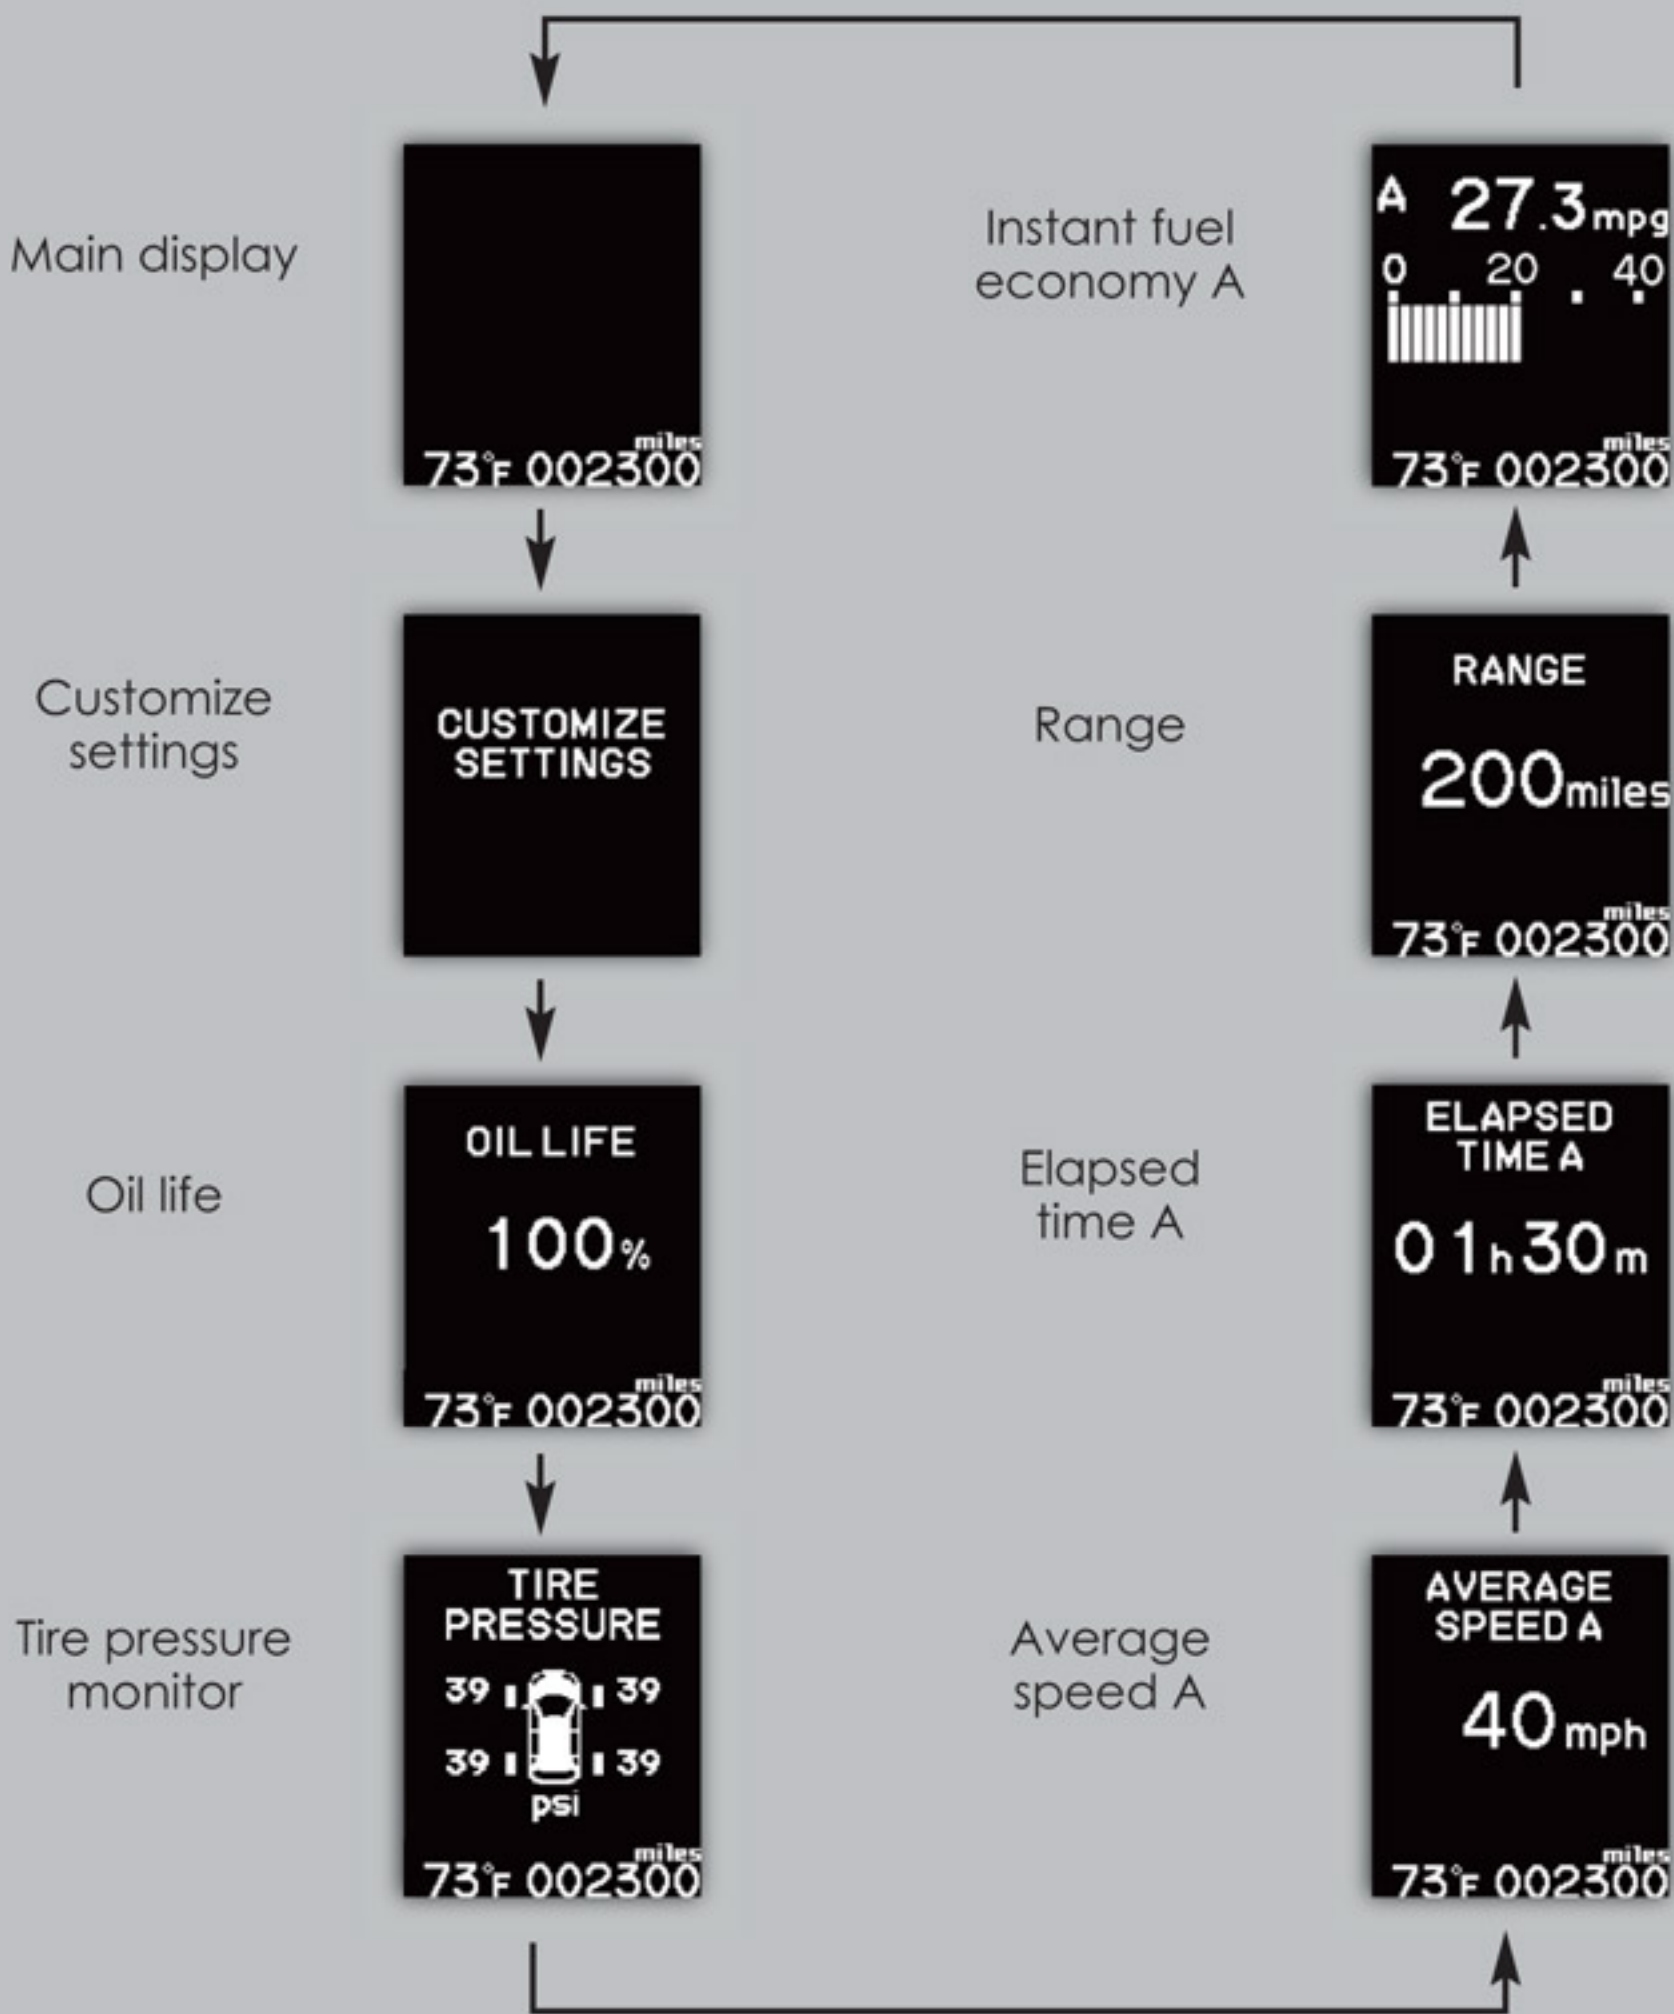

Lower Displays

