

# POWER TAILGATE

There are multiple methods to operate the power tailgate.

## Opening the Power Tailgate from Inside the Vehicle

The vehicle must be in Park (P) with all doors unlocked.



- Press and hold the tailgate button until a beep sounds. The tailgate begins to open.
- To close the tailgate, press the button again at any time.

## Opening the Power Tailgate Using the Remote Transmitter

The vehicle must be off with the remote in operating range.



*In ANYTIME mode:* Press and hold the tailgate button for about one second to unlock and open the tailgate.



*In WHEN UNLOCKED mode:* Press the unlock button twice to unlock all doors and the tailgate. Then press and hold the tailgate button for about one second.

Use the MID to set the power tailgate keyless open mode to your preference. See your Owner's Manual for instructions.