

# BLUETOOTH® HANDSFREELINK® (HFL)

Make and receive phone calls through your vehicle's audio system. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to check if your phone is compatible.


## Using HFL

**Pick-Up button:** Answer an incoming call or display speed dial and call history in the MID.

**Hang-Up/Back button:** End or decline a call, clear HFL information in the MID, or cancel an operation.

**Selector wheel:** Scroll through speed dial and call history in the MID. Press to make a selection.

**Talk button:** Make a call using a stored voice tag, phonebook name, or phone number.

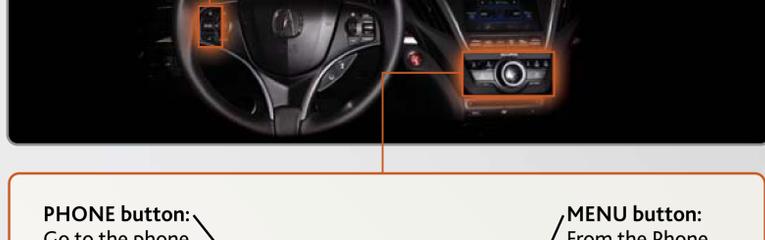

**PHONE button:** Go to the phone screen.

**BACK button:** Cancel an operation or return to the previous screen.

**Interface Dial:** Rotate to scroll through selections and press to enter a selection.



**MENU button:** From the Phone screen, access Speed Dial, Call History, Phonebook, and more.

**SETTINGS button:** Go to Phone Settings to pair a phone and set up text/e-mail options.

To reduce the potential for driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.

## Pairing Your Phone

Pair your phone when the vehicle is stopped to begin using hands-free phone and related audio functions.

### Use the interface dial to make and enter selections.

1. Press SETTINGS.
2. Select Phone Settings.
3. Select Bluetooth Device List (if no phone has been paired) or Connect Phone (if pairing an additional phone).
4. Select Add Bluetooth Device.
5. Make sure your phone is in discovery mode.
6. HFL searches for your phone. Select your phone when it appears on the list.



*If your phone does not appear:*

Select Device Not Found and search for HandsFreeLink from your phone.

7. HFL gives you a six-digit code. Compare it to the code that appears on your phone. Connect to HFL from your phone.
8. The system asks if you want to enable Phone Synchronization. Select On to automatically import contacts and call history.



## Receiving a Call

A notification is heard and the incoming call information appears on the display.

Press the Pick-Up button to accept the call.



You can also select the icons on the ODDM.



Press the Hang-Up button to end or decline the call.




## Dialing a Number

Enter a 10-digit phone number to call.

### Using the Menu\*

#### Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Dial.
4. From the navigation screen or the ODDM, enter the phone number. Select the green phone icon to call.

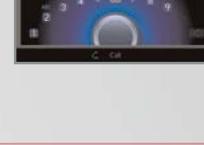

### Using Voice Commands

#### Press and release the Talk button to say a command.

1. Say "Dial by number."
2. Say the phone number. For example, "3-1-0-5-5-5-1-2-3-4."
3. The system begins to dial.



### Using the ODDM\*

#### Select items by touch.

1. Select Shortcuts.
2. Select Phone.
3. Select Dial.
4. Enter the phone number and select the green phone icon to call.



\*Manual dialing is disabled while the vehicle is moving. Voice commands are always available.


## Using the Phonebook

When your phone is paired, its entire phonebook is automatically imported to the system. Phone synchronization must be on for this feature to work.

### Using the Menu\*

#### Use the interface dial to make and enter selections.

1. Press PHONE.
2. Press MENU.
3. Select Phonebook.
4. Scroll through the list to find the name and number you want to call, and select it to call.

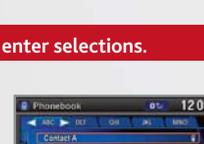

\*Scrolling is limited while the vehicle is moving. Voice commands are always available.

### Using Voice Commands

#### Press and release the Talk button to say a command.

1. Say "Dial by name."
2. Say the phonebook name and phone type. For example, "John Smith mobile."



## Using Speed Dial and Call History

Store 20 speed dial entries for quick calling, or view the last 20 calls.

### Using the Phone Screen\*

#### Use the interface dial to make and enter selections.

1. Press PHONE.
2. For Speed Dial, scroll through the list to find the entry you want to call, and select it to call.

For Call History, move the interface dial to the right and scroll through the list.




\*Scrolling is limited while the vehicle is moving. Voice commands are always available.

### Using the MID

#### Use the left selector wheel on the steering wheel to enter selections.

1. Press the Pick-Up button.
  - The speed dial list appears in the MID.
  - For Call History, move the selector wheel to the right.
2. Scroll through the list to find the entry you want to call, and select it to call.

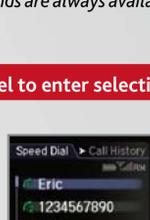

### Using the ODDM

#### Select items by touch.

1. Select Shortcuts.
2. Select Phone.
3. Select Speed Dial or Call History.
4. Select the desired entry to call.



## Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
<b>HFL System (Without Navigation)</b>	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
<b>HFL System (With Navigation)</b>	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted