

Things You Need to Know

- Always check tire pressure when the tires are cold.
- With the driver's door unlocked, push the fuel fill door to open it. Use premium unleaded fuel.*
- A Fuel Cap message will come on if the gas cap is not tightened (see Instrument Panel).
- The engine may occasionally take longer to start than usual; the engine management software is working to reduce emissions at startup.
- When you first accelerate after starting the vehicle, you may hear a brief buzzing sound caused by the VSA performing a self-check.

** Check the owner's manual for additional information and instructions.*

Instrument Panel Indicators

Indicators should go out shortly after starting the engine. If an indicator stays on or comes on while driving, refer to the owner's manual for more information.

- A red indicator is more critical than an amber indicator, and requires immediate attention.
- Blue and green indicators are general information.



Charging system indicator: Battery is not being charged.



Low oil pressure indicator: Low oil pressure; turn the engine off as soon as safely possible.



Supplemental restraint system (SRS) indicator: Airbag system malfunction.



Seat belt reminder light: Fasten seat belts.

BRAKE



Parking BRAKE and BRAKE system indicator: Parking brake on AND/OR low brake fluid level OR there is a problem with the brake system.

Door/Trunk open indicator: Comes on if the trunk or a door is not closed tightly.



 
Security system indicator(A): Blinks when the security system is armed.



Fuel gauge/low fuel indicator(B)



Anti-lock brake system (ABS) indicator: ABS malfunction - vehicle has normal braking, but no ABS; see dealer as soon as possible.

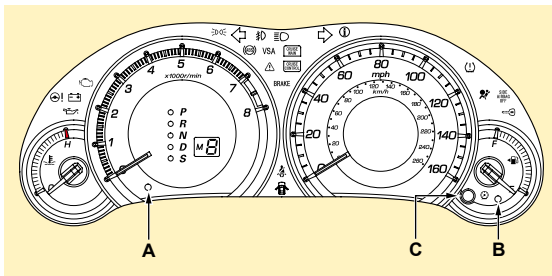

Malfunction indicator lamp (check engine light): Engine or emissions system malfunction. Lights when the ignition switch is turned to ON (II), and goes out after the engine starts. If it comes on at any other time, there may be an engine or emissions system malfunction. Continued operation with this indicator on could result in serious damage.



SIDE AIRBAG cutOFF indicator: Passenger's side airbag is off and will not deploy during a crash.*



PASSENGER AIRBAG cutOFF indicator: Passenger's front airbag is off and will not deploy during a crash.*

Note: Do not place objects or feet under the front seats; this could prevent the airbags from working properly.



Temperature gauge: If the needle is in the red mark, turn off the engine immediately, or as soon as safely possible.*



Electric Power Steering (EPS) indicator: EPS malfunction. Stop the vehicle in a safe place, turn off the ignition, then restart the vehicle. If the indicator does not go off or comes on again, see a dealer.



Vehicle stability assist (VSA) activation indicator: Indicates VSA is turned off, or comes on with VSA system indicator when VSA is malfunctioning. Flashes when VSA is active.



Vehicle stability assist (VSA) system indicator: VSA system malfunction* - vehicle has normal driving ability, but does not have VSA traction and stability enhancement; see dealer as soon as possible.



Low tire pressure/TPMS indicator: TPMS malfunction, or vehicle tire(s) are significantly low; stop the vehicle in a safe place.*



Lights on indicator: Parking lights or headlights are on.



Immobilizer system indicator: Flashes if an improperly coded key is used to try to start the engine. Comes on briefly when the key is turned from LOCK (0) or ACC (I) to ON (II).



Sequential sportshift mode indicator (automatic)



CRUISE MAIN indicator: Cruise control is on, waiting to be set.



CRUISE CONTROL indicator: Cruise control is set.



Turn signal/hazard warning indicators



High beam indicator



Fog lights on indicator: Fog lights are on. Fog lights only work when the headlights are on low beam; they go off when you turn the headlights off or to high beam.

 
 
Adjusting the Instrument Panel Brightness

- Turn the knob (c) to adjust the brightness.

Tip: *The instrument panel dims when the parking lights or headlights are on unless it is adjusted to full brightness.*

Multi-Information Display (MID)*

Shows various types of information/messages that help with operation of your vehicle, or indicate that periodic maintenance is due.

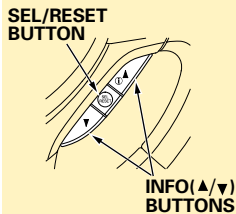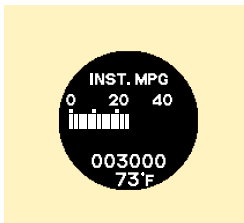

Trip Computer

You can change the display and customize your vehicle settings using the SEL/RESET button. Each time you press the SEL/RESET button, the display shows:

Lower display:

Changes between the odometer, outside temperature, Trip A, Trip B, maintenance codes, and engine oil life.

Upper and Middle display:

INST. MPG: Current fuel economy.

AVG. FUEL A/B: Average fuel economy since last reset.

AVG. FUEL B: Only displayed when Trip B is selected.

RANGE: Estimated distance you can travel on the fuel remaining in the tank.

ELAPSED TIME: Time elapsed since last reset.

AVG. SPEED: Average vehicle speed since last reset.

TIRE PRESSURE MONITOR: Current tire pressure status.

Resetting the Trip Meter

1. Press the SEL/RESET button on the steering wheel to select Trip meter A or B.
2. Press and hold the SEL/RESET button until the number resets to "0.0," then release.

Maintenance Minder*

 
 
Three types of messages appear in the MID.

SERVICE DUE SOON: means the maintenance timing is coming soon.

SERVICE DUE NOW: means the maintenance timing is now.

SERVICE PAST DUE: means the maintenance timing is passed.

The system also displays the code for maintenance items needing service. Have the service performed by your dealer.

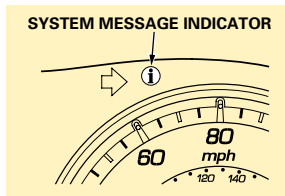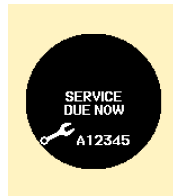

System Message Indicator*

If there is problem with your vehicle, a message will be shown on the MID, and then a system message is displayed. You can see the message again by pressing the INFO button when the indicator is on.

DRIVER (1 or 2):

FASTEN SEAT BELT: Driver's seat belt is not fastened.

FASTEN PASSENGER SEAT BELT: Front passenger's seat belt is not fastened.

Release Parking Brake: Releasing the parking brake.

Remove Key: Ignition key is in the LOCK (0) or ACC (I) position, and the driver's door is open.

Passenger Side Airbag Off: If the passenger's side airbag has been shut off automatically.

TIGHTEN FUEL FILL CAP: Fuel fill cap is missing or not properly tightened.*

Water Temp Hot: if the engine coolant becomes hot. The engine should be cooled down.

Fuel Low: Fuel level in the tank low.

Check Tire Pressure: Appropriate indicator comes on if a tire is significantly underinflated (see TPMS).

Check TPMS System: Possible TPMS malfunction; have a dealer inspect the vehicle.

Check DRL System: DRL (Daytime Running Lights) Malfunction. Vehicle headlights work normally.

Note: *If any of the following messages appear on the display, there is a problem in the related system. Have a dealer check your vehicle as soon as possible.*

- Check Charging System
- Check Brake System
- Check Engine Oil Level
- Check Emissions System
- Check VSA System
- Check Power Steering System
- Check ABS System
- Check Transmission
- Check Airbag System
- Brake Fluid Low

AcuraLink (if equipped) may also provide additional information.*

Door and Trunk Open Indicators



The corresponding door or the trunk lid indicator comes on if it is not closed tightly.

Outside Temperature and Odometer

Displays outside temperature and odometer when SEL/RESET button is pressed. The temperature display can be adjusted.*

Note: *The vehicle needs to be moving at a sufficient speed for a period of time to provide an accurate temperature reading.**

MID Customize Mode*

 
You can customize some of the vehicle settings. To enter customize mode;

1. Shift to P (A/T).
Set the parking brake (M/T).
2. Press the INFO button for about 3 seconds.
3. Select CHG SETTING, then press SEL/RESET.

Always use the INFO buttons (▲ or ▼) on the steering wheel to move between settings, and use the SEL/RESET button to enter your selection.

* Check the owner's manual for additional information and instructions.


Windshield Wipers/Washers Lever

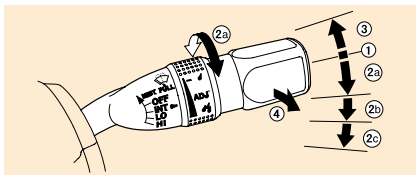

1. OFF
2. **Wiper ON**—Push the lever down:
 - a. **INT** (1st detent)—Wipers operate intermittently. **ADJ** ring—Rotate to adjust wiper interval speed.
 - b. **LO** (2nd detent)—Long sweep intervals.
 - c. **HI** (3rd detent)—Short sweep intervals.
3. **MIST**
4. **Wiper and Washer ON**—Pull back and hold to clean the front windshield (washers spray, wipers sweep).


Parking Brake

 To release, pull up slightly, push the button, and lower completely.

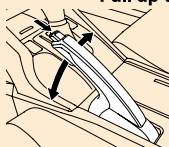

Note: If you start to drive with the parking brake applied, a beep sounds.

 Headlights/Turn Signals Lever

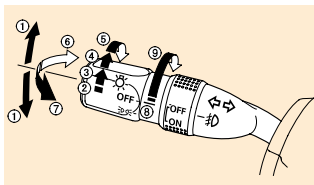

1. Turn signal
2. Off
3. Parking/instrument panel lights
4. AUTO ON
5. Headlights
6. High beams
7. Flash to pass
8. Fog lights OFF
9. Fog lights ON

Auto Lighting Off

If you leave the parking lights or headlights on, remove the key, open then close the driver's door, and the lights turn off in 15 seconds. The lights turn on again when you unlock or open the driver's door.

 
Auto Lighting On

The AUTO position turns on the headlights and all other exterior lights when low ambient lighting is detected.

Daytime Running Lights

With the headlight switch off, the high beam headlights come on with reduced brightness when you turn the ignition to ON (II) and release the parking brake.

Tilt and Telescoping Steering Wheel

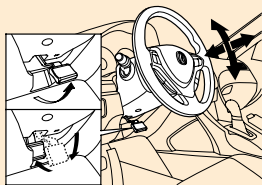

Pull the lever on the underside of the steering column toward you.

 
Adjust the steering wheel; up, down, in, or out.

Push the lever forward fully to lock it in place.

Automatic Rearview Dimming Mirror

INDICATOR;
lit when on.

AUTO BUTTON;
press to turn on/off.

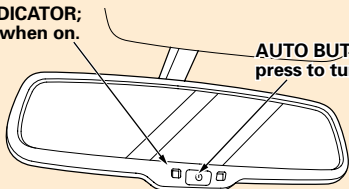


The passenger door mirror has a reverse tilt feature when the power mirror selector switch (A) is in the passenger side position. The mirror tilts down when you shift to reverse to improve your view. Shifting out of reverse returns the mirror to its original position.

Heated Mirrors, Rear Window Defogger


The heated mirrors can be activated by pressing the rear window defogger button (see Climate Control).

Front Armrest

 Power Mirrors

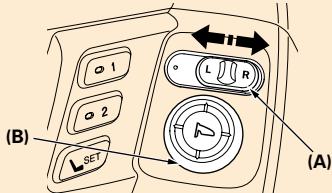

 1. With the ignition switch ON (II), move the selector switch (A) to the L (driver's side), or R (passenger's side).
2. Push the edge of the adjustment switch (B) to move the mirror right, left, up, or down.
3. When finished, move the selector switch back to the center (off) position.

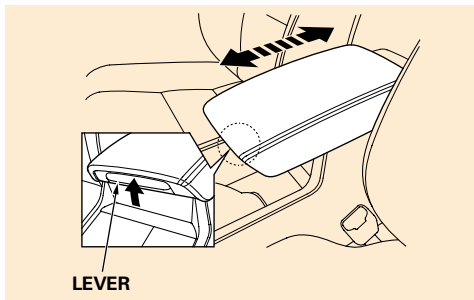

To adjust, slide the center console lid forward or rearward by pulling up the lever.