

KEYLESS REMOTE ACCESS

Operate certain functions of your vehicle by simply having the remote within operating range.

Unlocking/Locking the Doors




To unlock, **grab** either one of the front door handles.



To lock, **touch** the door lock sensor on either front door handle.



Opening the Trunk

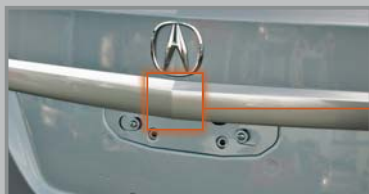

Press the trunk release switch.



Starting the Engine



Turn the ignition switch as you would if a key were inserted.



KEYLESS MEMORY SETTINGS

When linked, each remote (labeled 1 or 2 on the back) activates its own set of programmable driving position memory and customized settings (MID).

Remote Verification

1. Verify that you are using the correct remote by turning the ignition switch to ON (II).



2. Check the MID:

- If you have the correct remote, the driver ID that first appears on the MID will match the ID number on the back of your remote.
Go to step 3.

Welcome
DRIVER 1



- If the numbers do not match, follow these simple instructions:

Turn the ignition switch to LOCK (0).



Press the unlock button on your remote.



Turn the ignition switch to ON (II), and **check** the MID. The driver ID that first appears on the MID should now match the number on the back of your remote.



Welcome
DRIVER 2



3. Once you have the correct remote, you can begin to program your Keyless Memory Settings.