

 
 
# SMS TEXT MESSAGING

Receive and send text messages from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

## Receiving Text Messages

Press and release the Talk button before you say a command.


1. A notification appears on the navigation screen when you receive a text message.
2. **Say** "Read" to open the message. The message is displayed, and the system reads it aloud.

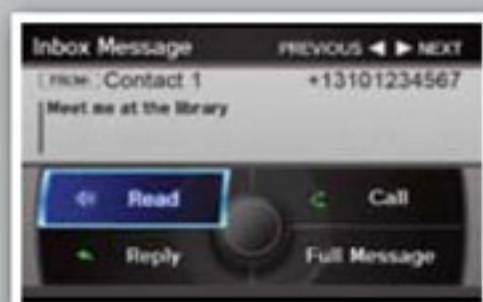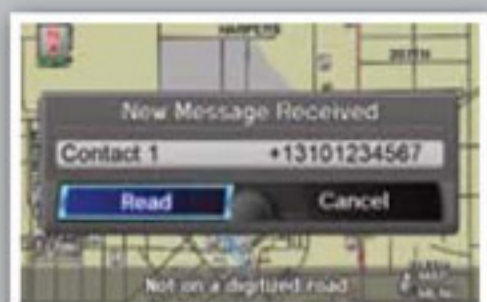



## Replying to Text Messages

Press and release the Talk button before you say a command.

 1. With the message open, **say** "Reply."
3. **Say** "Send" to send the message.

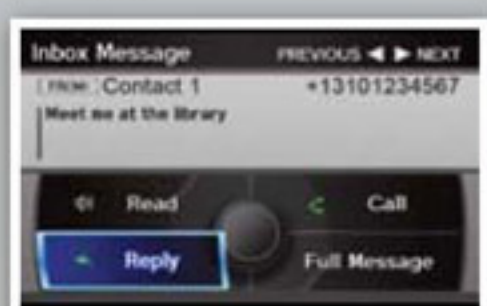

 
 
2. **Say** the number next to one of the six available reply messages.
4. A notification appears after the message is sent.

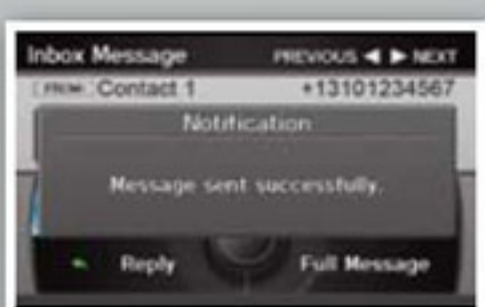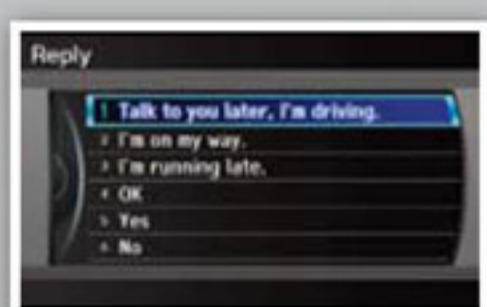

## Calling the Sender

Press and release the Talk button before you say a command.

 
 
1. With the message open, **say** "Call."
2. HFL begins dialing the number.

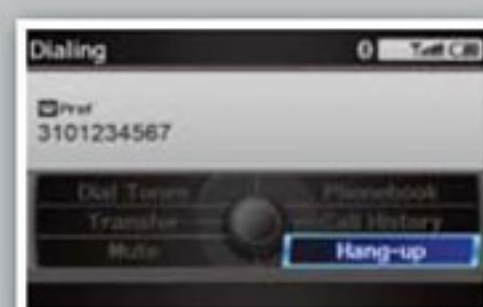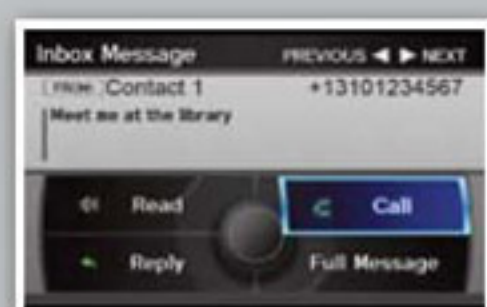

## Displaying All Messages

Press and release the Talk button before you say a command.

  1. **Press** the Pick-Up button to go to the Cellular Phone menu.
3. **Say** the number next to the message you want. The message is displayed, and the system reads it aloud.

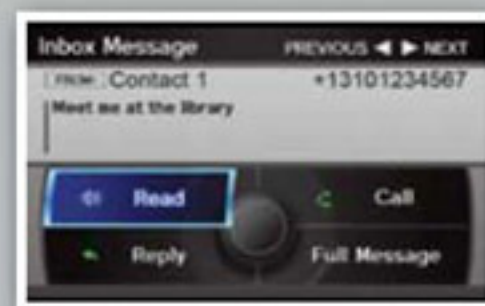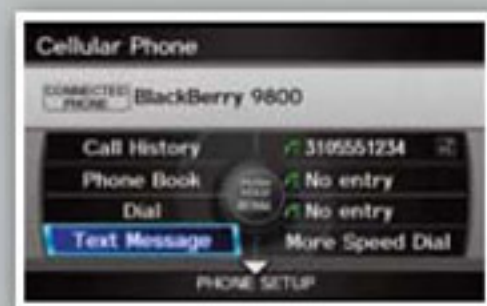

2. **Say** "Text Message." The 20 most recent text messages from your phone are displayed.

