

KEYLESS ACCESS SYSTEM

Operate certain functions of your vehicle by simply having the remote transmitter within operating range.


Unlocking the Doors



Grab either one of the front door handles when the vehicle is off.




Locking the Doors

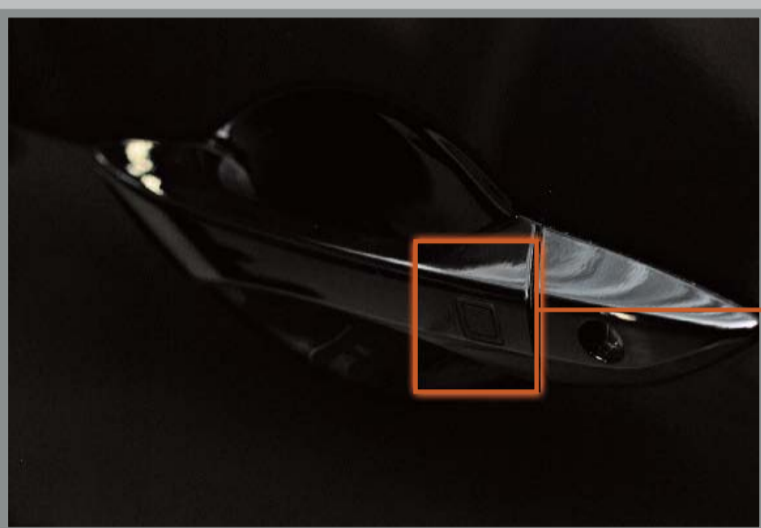

Press the door lock button on either front door handle when the vehicle is off.



Opening the Tailgate

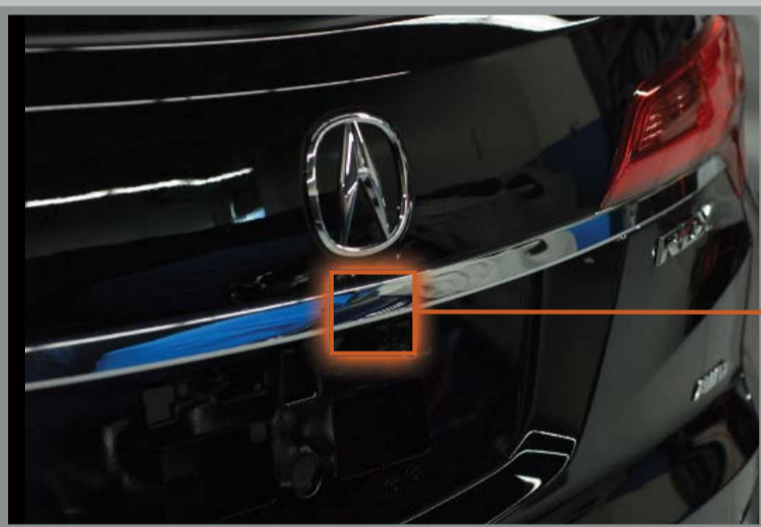

Press the tailgate release button under the tailgate handle when all doors are unlocked. The vehicle can be on or off.




Engine Start/Stop Button

Accessory Mode

Use audio, power sockets, etc., without turning the engine on.



Press the ENGINE START/STOP button once (without pressing the brake pedal).

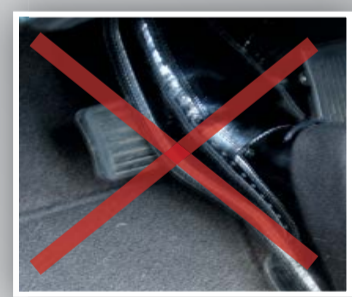

Starting the Engine



Press and hold the brake pedal, then **press** the ENGINE START/STOP button.



Turning the Engine Off



Shift to Park, then **press** the ENGINE START/STOP button.

