


MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the MID

When you start the engine, the MID shows the last active lower display from the previous drive cycle.

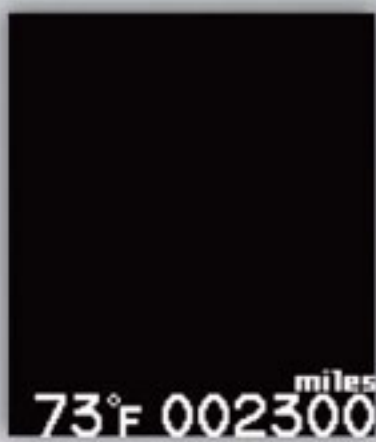


To toggle between the different displays:

- **Press** either Info button (▲/▼) for the main displays.
- **Press** SEL/RESET for the lower displays.




Main Displays

Main display

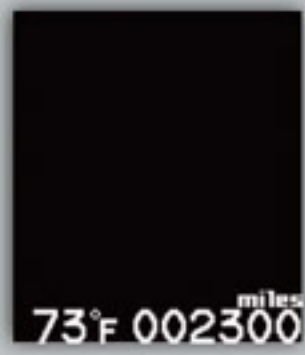

Customize settings

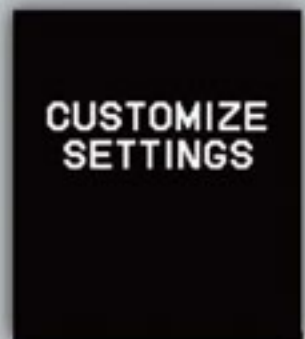


Oil life



Tire pressure monitor



Instant fuel economy A

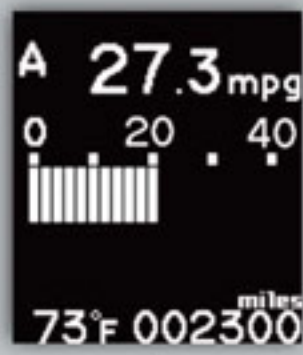

Range



Elapsed time A




Average speed A



Lower Displays

Outside temperature, Odometer

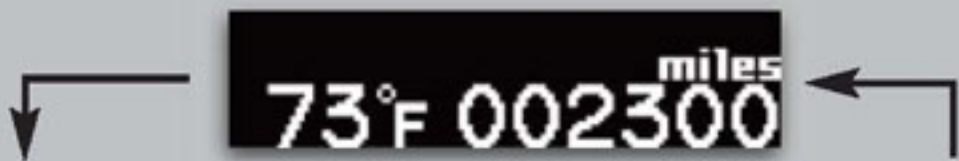

Outside temperature, Trip A



Outside temperature, Trip B

