


FORWARD COLLISION WARNING (FCW)

Alerts you to the possibility of a front-end collision. *Available with Technology Package.*

How It Works

At 10 mph or higher, if the radar sensor in the front grille detects a vehicle in front of you and the system determines a collision is likely, the system warns you with visual and audible alerts.

Warning timing depends on Long, Normal, or Short settings.

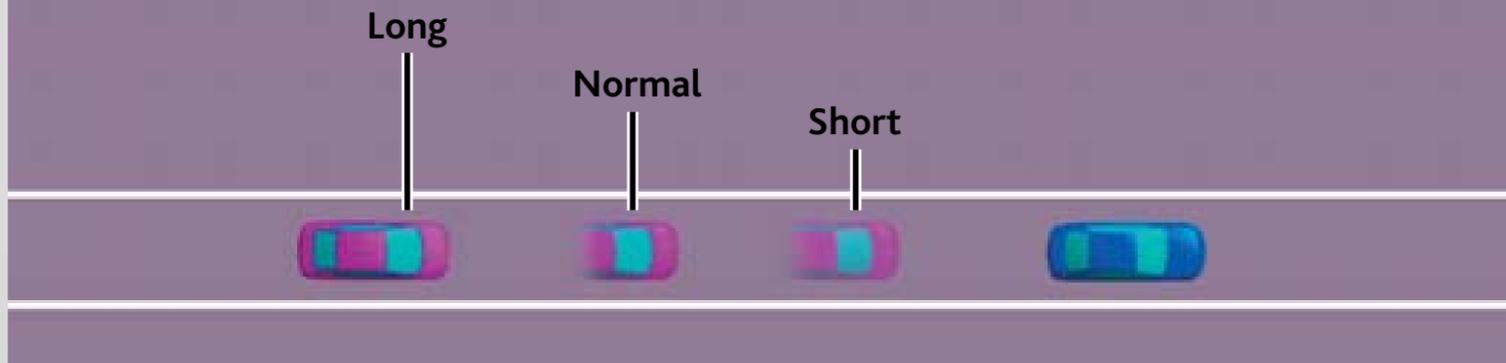

If you do not brake in time or take preventive action:

- BRAKE flashes in the MID
- a beep sounds continuously



FCW may not activate under certain conditions. See your Owner's Manual for more information.

Changing Settings

Determine the warning timing, or turn the system off.*



1. Press SETTINGS. Use the interface dial to make and enter selections.
2. Select Vehicle Settings.
3. Select Forward Collision Warning Distance.
4. Select Long, Normal, Short, or Off.
5. Press BACK to exit the menu.

*You can also change these settings using the multi-information display.