


ELECTRIC PARKING BRAKE

Keep your vehicle stationary while parked using a simple switch.


Applying the Parking Brake




Pull up the parking brake switch.

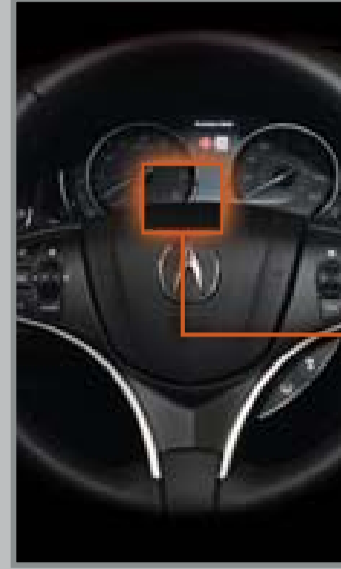

The PARK indicator turns on.

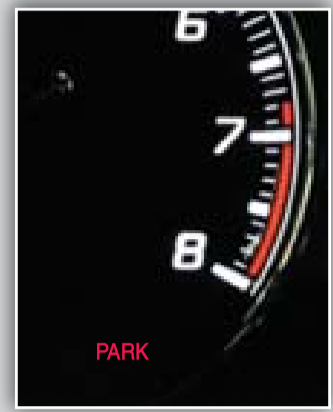

Releasing the Parking Brake

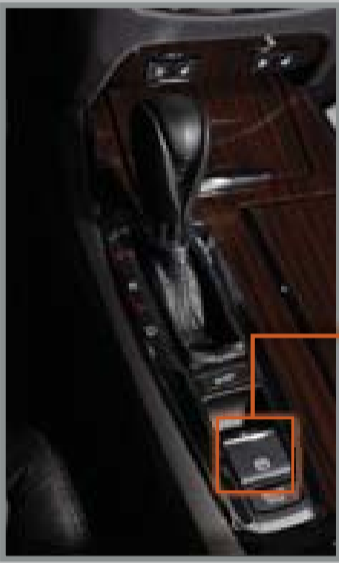

Press the parking brake switch with your foot on the brake pedal and your seat belt fastened.





You can also lightly depress the accelerator pedal if your seat belt is fastened and the vehicle is on and not in Park.

AUTOMATIC BRAKE HOLD

Maintains rear brake hold even after the brake pedal is released.


How It Works

1. Make sure the vehicle is on and your seat belt is fastened.
2. Press BRAKE HOLD. The BRAKE HOLD indicator turns on.
3. With the shift lever in Drive (D), depress the brake pedal and come to a complete stop. The HOLD indicator appears and brake hold is applied. Release the brake pedal.

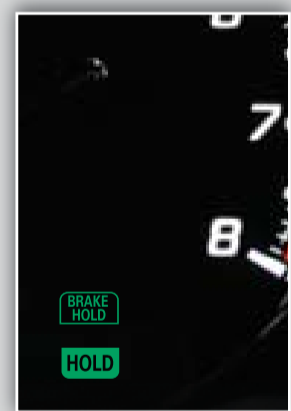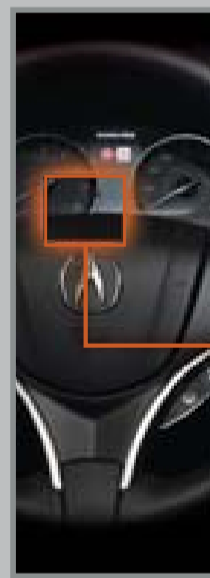

Depress the accelerator pedal to cancel brake hold and start moving.

4. Depress the brake pedal and press BRAKE HOLD again to turn off the system.

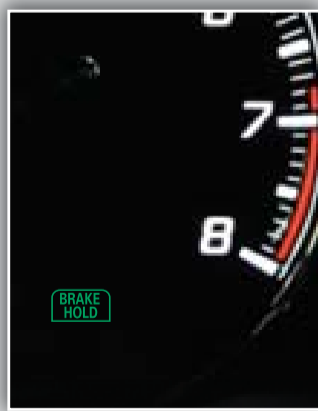

Note: Brake hold is canceled if the system is on for more than 10 minutes, your seat belt is unfastened, or you turn the vehicle off.