


TIRE PRESSURE MONITORING SYSTEM (TPMS)

Alerts you when one or more of your tires has significantly low pressure.


How It Works

If the tire pressure drops significantly below recommended levels:

- The low tire pressure indicator comes on.
- A CHECK TIRE PRESSURE message appears on the MID, showing which tire(s) have low pressure.

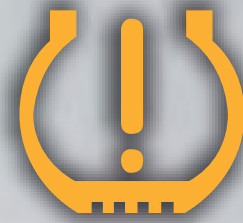

Press either Info (▲/▼) button to scroll to the tire pressure monitor to view readings.

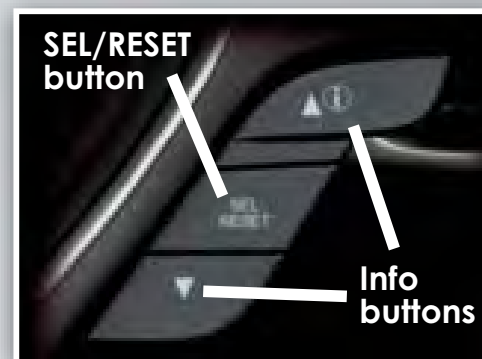

What to Do

1. Visually inspect the tires for damage.
2. Check the MID to check which tire(s) have low pressure.
3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.

