

BLUETOOTH® HANDSFREELINK® (Base model)


Place and receive phone calls through your vehicle's audio system. Visit www.acura.com/handsfreelink to check if your phone is compatible.

Using HFL



HFL Talk button: Give HFL commands and answer incoming calls.

HFL Back button: Cancel a command and end or decline a call.

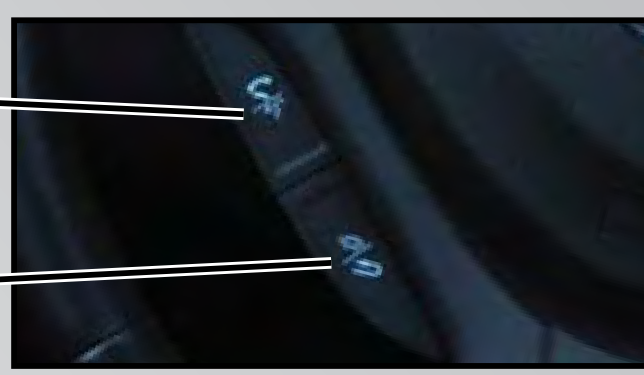

Pairing Your Phone

Pair your compatible phone only when the vehicle is stopped.

Press and release the HFL Talk button before you say a command.

1. Enable discovery mode on your compatible phone.
2. If no phone has been paired before, the system gives you instructions.
If you are pairing an additional phone, say "Phone setup," then say "Pair."
3. HFL gives you a four-digit code that also appears on the MID.
4. Search for HandsFreeLink from your phone, and enter the code when prompted. Connect to HFL.
5. HFL asks you to name the phone. For example, say "Mary's phone." The phone is now paired.



Making a Call

Press and release the HFL Talk button before you say a command.

1. Say "Call" and the phone number.
2. Say "Call" or "Dial" to begin the call.
3. The call is connected and heard through the speakers.



2. Say "Call" or "Dial" to begin the call.




Receiving a Call


A notification is heard and the following screen appears on the MID:



Press the HFL Talk button to accept the call.

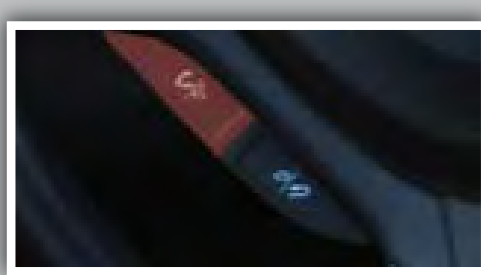

Press the HFL Back button to decline or end the call.

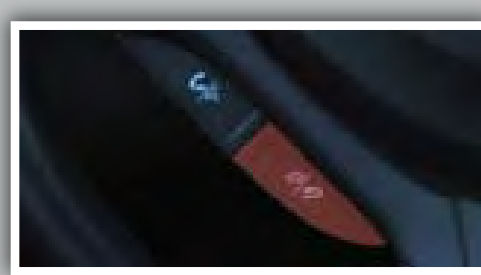


HFL Phonebook

Store up to 50 names and their phone numbers, which can be used as speed dial entries.

Press and release the HFL Talk button before you say a command.

1. Say "Phonebook."
2. Say "Store."
3. Say the name of the contact, and then the phone number.
4. To call a contact once an entry is stored, say "Call Mike."

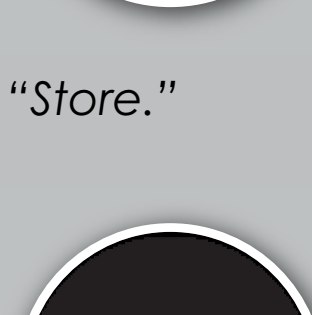

Driver Distraction

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted