


## Lane Departure Warning (LDW)\*

Alerts you if the system detects a possibility of your vehicle unintentionally crossing over detected lane markings while driving between 45–90 mph (72–145 km/h).

If your vehicle is getting too close to detected left or right side lane markings without a turn signal activated, the system provides audible and visual alerts.


A Lane Departure message appears on the MID, and a beep sounds. Take appropriate action to stay within your driving lane.

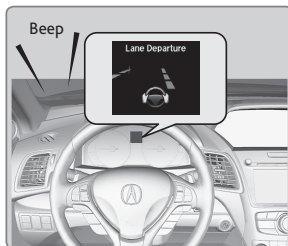

### ■ Turning LDW On or Off

Press the LDW button to turn the system on or off.

A green indicator light appears on the button when the system is on.

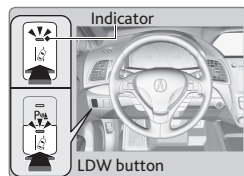

### Important Safety Reminder

Like all assistance systems, LDW has limitations. Over-reliance on LDW may result in a collision. It is always your responsibility to keep the vehicle within your lane.