

## On-Demand Multi-Use Display™ (ODMD™)

Operate the audio system using either the touchscreen or dashboard buttons.

The functions shown here can be used with most audio sources. Refer to subsequent audio pages for more specific functions. Options that appear depend on the selected audio source.

**ODMD controls**

**Power button**

**Volume knob**

**Source:** Change the audio source. Select Edit Order to arrange audio icons to your preference.


**Sound:** Adjust sound settings.

**CD slot**

**CD eject button**

**Shortcuts (Audio tab):** Store or select up to six AM, FM, or XM stations or HDD tracks.

**More:** Change screen and sound settings, or display menu options.

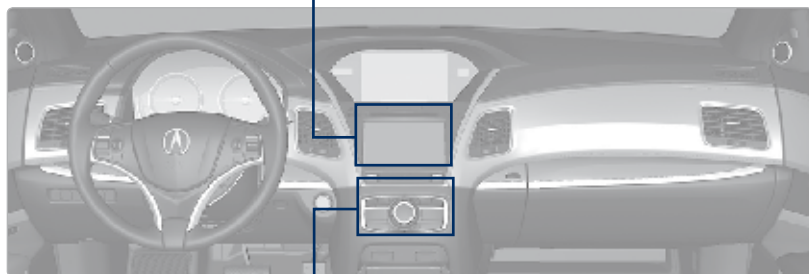

**Audio buttons**

**BACK button:** Return to the previous display.

**AUDIO button:** Display the audio screen.

**MENU button:** Display menu items.

**Interface dial:** Move up, down, left, and right. Rotate and press ENTER to make selections in the upper display.

**SETTINGS button:** Choose Audio Settings.

**\* button:** Adjust the upper screen brightness. Use the interface dial to make adjustments.