

# VEHICLE CONTROLS

Learn about the various controls necessary for operating and driving the vehicle.

## Using the Remote Transmitter

Lock or unlock the doors, tailgate, and fuel-fill door. Start and stop the engine.\*1

Models without two-way keyless access remote



Models with two-way keyless access remote



## NOTICE

Leaving the remote transmitter in the vehicle can result in theft or accidental movement of the vehicle. Always take it with you whenever you leave the vehicle unattended.

## Keyless Access System




When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors, fuel fill door and the tailgate without handling the transmitter.

*\*1 - If equipped*

## ■ Unlocking/Locking the Doors

**To unlock:** Touch the door lock sensor on the front or rear<sup>\*1</sup> door or rear<sup>\*1</sup> door handle to unlock all the doors and the tailgate. You can customize this feature's behavior.

**To lock:** Touch the door lock sensor on the front or rear<sup>\*1</sup> door, or press the door lock button on the tailgate.

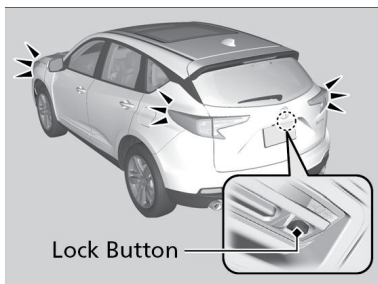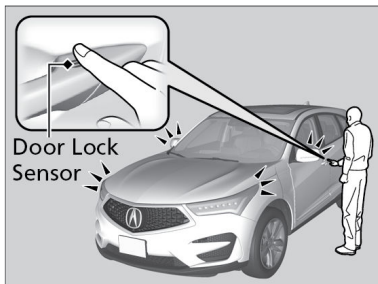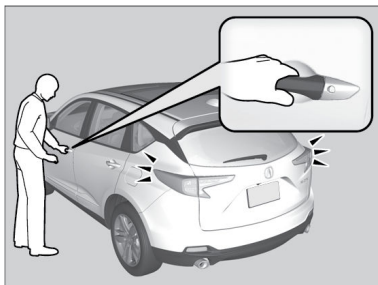

*\*1 - If equipped*