Keyless Access System

When you carry the remote transmitter (for example, in a pocket or purse) and it is outside the vehicle and within range (about 32 inches or 80 cm), you can lock or unlock the doors, and the trunk without handling the transmitter.

Unlocking/Locking the Doors

To unlock: Grab the driver's door handle to unlock the driver's door. Grab the front passenger's door handle or rear door handle to unlock all the doors and the trunk. You can customize this feature's behavior.

To lock: Press the door lock button on either front door (or rear door) handle when the vehicle is off. If the remote transmitter is inside the vehicle, the doors will not lock.





VEHICLE CONTROLS


Customizing Door Lock & Unlock Settings

Customize the auto door lock and door unlock settings to your preference. Begin with the vehicle off.

- 1. Press the **SETTINGS** button and select System Settings.
- 2. Rotate the **ENTER** knob to select Door Setup.
- Select Auto Door Lock or Auto Door Unlock by pressing the ENTER knob.

Customized Features

Use the Settings menu to customize certain features when the vehicle is stopped and the power mode is ON.

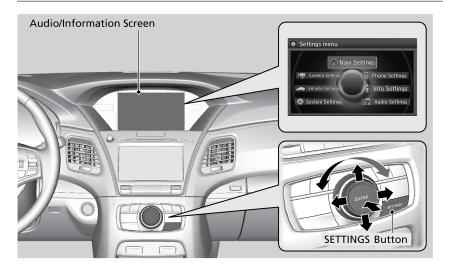

How to Change a Setting

- Press the SETTINGS button.
 Be sure the power mode is ON and the vehicle is at a complete stop.
- 2. Rotate the **ENTER** knob to view categories.
- 3. Press the ENTER knob to select.

Setting the Clock

On vehicles with navigation, the time is automatically set using GPS signals. On vehicles without navigation, use the following steps to adjust the time in the clock display.

- Press the SETTINGS button.
- Rotate interface dial to select System Settings, then press the interface dial.
- 3. Rotate the interface dial to select the **Clock** tab.
- Rotate the interface dial to select Clock Adjustment, then press the interface dial.
- 5. Rotate the interface dial to change the hours, then press dial to set.
- hours, then press dial to set.

 6. Rotate the interface dial to change the minutes, then press the dial to set.

