### Adjusting the Sound

Adjusting the Sound - Models with One Display


Press the SETUP button, and rotate the selector knob to select Sound Settings. Rotate the selector knob to scroll through the following choices:

- Bass
- Treble
- Fader
- Balance
- Speed-sensitive Volume Compensation




### Adjusting the Sound - Models with Two Displays

- Select Audio Menu, then select Sound Settings.
- Select the setting you want to adjust: Bass, Treble, Fader, Balance, Center\*1, Subwoofer, SVC (Speedsensitive Volume Compensation) or DTS Neural Surround\*1.
- 3. Use +, or other icons to adjust the setting.

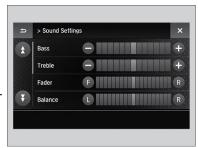

#### Audio Remote Controls

You can operate certain functions of the audio system using the steering wheel controls.

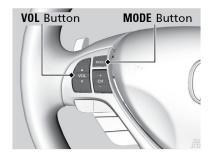

**Volume Button (Up/Down** Press to adjust the volume. **Arrows):** 


MODE Button: Press to cycle through the available audio modes.

### **Audio/Information Screen**

Displays each mode status and wallpaper. From this screen, you can go to various setup options.


### Switching the Display

Models with one display

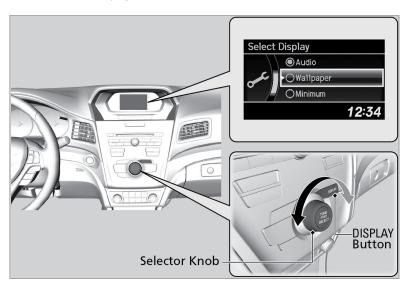

- Press the DISPLAY Button.
- Rotate the selector knob and select the mode from the three display modes.


Models with two displays

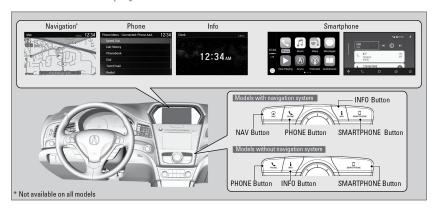

1. Press the NAV\*1, PHONE, INFO and SMARTPHONE buttons to go to the corresponding display.

## Audio System - Models with One Display

To use the audio system function, the power mode must be in ACCESSORY or ON.

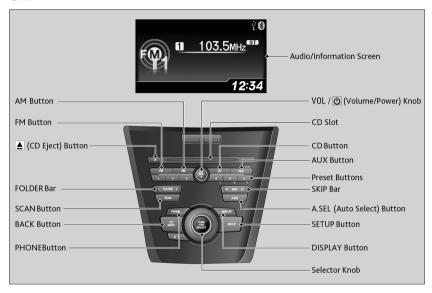

## NOTICE


Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

# **NOTICE**

Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

## Audio System - Models with Two Displays

To use the audio system function, the power mode must be in ACCESSORY or ON.

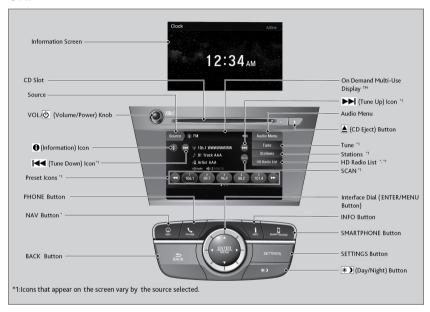

## **NOTICE**


Do not use CDs with adhesive labels. The label can cause the CD to jam in the unit.

## **NOTICE**

Do not insert a damaged CD. It may be stuck inside and damage the audio unit.

# On Demand Multi-Use Display<sup>™</sup>

Use the On Demand Multi-Use Display<sup>™</sup> to operate the audio system.

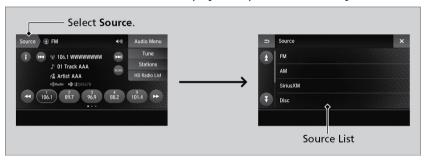


### **AM/FM Radio**

The ST indicator appears on the display indicating stereo FM broadcasts. Stereo reproduction in AM is not available.

#### AM/FM Radio

Models with One Display

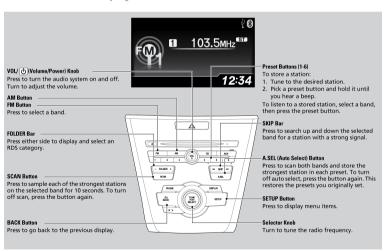

### Models with Two Displays

