


## ■ Customizing Door Lock and Unlock Settings

Customize the auto door lock and unlock settings to your preference.

1. From the HOME screen, select **Settings**.
2. Select **Vehicle**.
3. Select **Door Setup**.
4. Select **Auto Door Lock** or **Auto Door Unlock** to customize.

### Customized Features

Before you customize settings, make sure that the vehicle is at a complete stop with the power mode in ON and shift to Park (P).

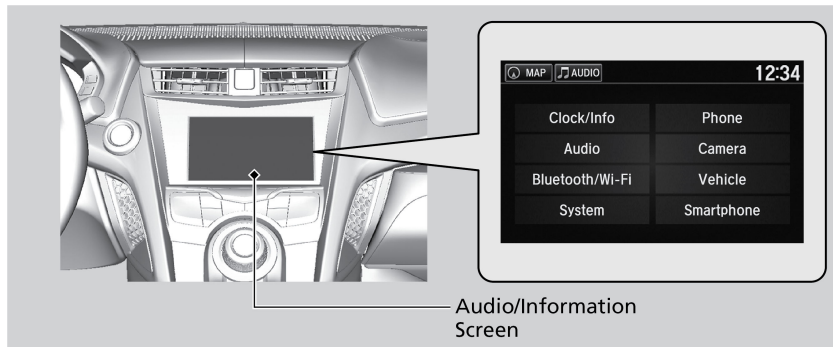

#### ■ To Change a Setting

1. Select the HOME icon.
2. Select **Settings**.
3. Select a category.
4. Select a setting option, and make your preferred changes.

## Setting the Clock

### Models with navigation system

The clock is automatically updated through the audio system, so the time does not need to be adjusted.

### Models without navigation system

You can adjust the time in the clock display with the power mode in ON.

To manually adjust the clock using the **Settings** menu on the audio/information screen use the following steps:

1. Select **Settings**.
2. Select **Clock/Info**.
3. Select **Clock Adjustment**.
4. Select the hour using the up and down arrows.
5. Select the minute using the up and down arrows.
6. Select **OK** to set the time.

