


Maintenance Minder™

When maintenance is due, the system message indicator comes on and a message appears on the display every time you turn the vehicle on. The messages notify you when to change the engine oil, or when to bring your vehicle to a dealer for indicated maintenance services.

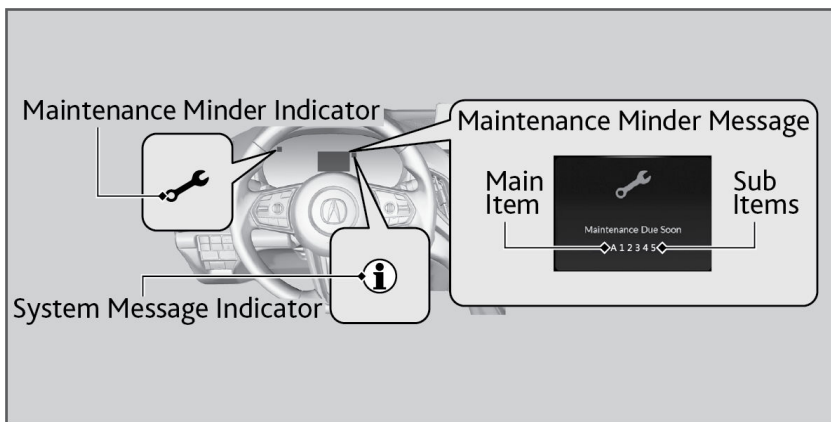

- Independent of the Maintenance Minder information, replace the brake fluid every 3 years.

U.S. Models

- Independent of the Maintenance Minder information, adjust the valves during services A, B, 1, 2, or 3 if they are noisy.

Canadian Models

- Independent of the Maintenance Minder information, adjust the valves during services A, 0, 9, 1, 2, or 3 if they are noisy.

U.S. Models

Maintenance, replacement, or repair of emissions control devices and systems may be done by any automotive repair establishment or individuals using parts that are certified to EPA standards.

According to state and federal regulations, failure to perform maintenance on the maintenance main items marked with # will not void your emissions warranties. However, all maintenance services should be performed in accordance with the intervals indicated by the multi-information display .

■ Maintenance Minder Service Codes

These codes indicate what services are due on your vehicle.

U.S. Models

CODE	Maintenance Main Items
A	<ul style="list-style-type: none">• Replace engine oil*¹
B	<ul style="list-style-type: none">• Replace engine oil*¹ and oil filter• Inspect front and rear brakes• Check expiration date for Temporary Tire Repair Kit bottle (If equipped)• Inspect tie rod ends, steering gearbox, and boots• Inspect suspension components• Inspect driveshaft boots• Inspect brake hoses and lines (Including ABS/VSA[®])• Inspect all fluid levels and condition of fluids• Inspect exhaust system[#]• Inspect fuel lines and connections[#]

*1: If a Maintenance Minder Indicator and message does not appear more than 12 months after the display is reset, change the engine oil every year.

: See information on maintenance and emissions warranty.

MAINTENANCE

CODE	Maintenance Sub Items
1	• Rotate tires
2	• Replace air cleaner element* ² • Replace dust and pollen filter* ³ • Inspect drive belt
3	• Replace transmission fluid and transfer* fluid
4	• Replace spark plugs • Inspect valve clearance
5	• Replace engine coolant
6	• Replace rear differential fluid* ⁴
7	• Replace brake fluid* ⁵

*2: If you drive in dusty conditions, replace the air cleaner element every 15,000 miles (24,000 km).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace the dust and pollen filter every 15,000 miles (24,000 km).

*4: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher level of mechanical (Shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the Maintenance Minder. If you regularly drive your vehicle under these conditions, have the differential fluid changed at 7,500 miles (12,000 km), then every 15,000 miles (24,000 km).

*5: If a Maintenance Minder Indicator does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

* Not available on all models

Canadian Models

CODE	Maintenance Main Items
------	------------------------

A • Replace engine oil*1

0 • Replace engine oil and oil filter*1

*1: If a Maintenance Minder Indicator and message does not appear more than 12 months after the display is reset, change the engine oil every year

CODE	Maintenance Sub Items
------	-----------------------

1 • Rotate tires

2 • Replace air cleaner element*2
 • Replace dust and pollen filter*3
 • Inspect drive belt

3 • Replace transmission fluid and transfer fluid

4 • Replace spark plugs
 • Inspect valve clearance

5 • Replace engine coolant

6 • Replace rear differential fluid*4

7 • Replace brake fluid*5

9 Service front and rear brakes

Inspect these items:

- Tie rod ends, steering gearbox, and boots
- Suspension components
- Driveshaft boots
- Brake hoses and lines (including ABS/VSA®)
- All fluid levels and condition of fluids
- Exhaust system#
- Fuel lines and connections#

*2: If you drive in dusty conditions, replace every 24,000 km (15,000 miles).

*3: If you drive primarily in urban areas that have high concentrations of soot in the air from industry and from diesel-powered vehicles, replace every 24,000 km (15,000 miles).

*4: Driving in mountainous areas at very low vehicle speeds or trailer towing results in higher level of mechanical (Shear) stress to fluid. This requires differential fluid changes more frequently than recommended by the Maintenance Minder.

If you regularly drive your vehicle under these conditions, have the differential fluid changed at 12,000 km (7,500 miles), then every 24,000 km (15,000 miles).

*5: If a Maintenance Minder Indicator does not appear more than 36 months after the display for item 7 is reset, change the brake fluid every 3 years.

: See information on maintenance and emissions warranty.