 



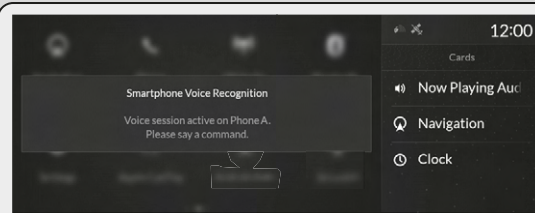
Siri Eyes Free

You can talk to Siri by pressing and holding the  (Talk) button on the steering wheel when your iPhone is paired to the *Bluetooth*® HandsFreeLink® (HFL) system.


 **Phone Setup** P. 335


■ Using Siri Eyes Free

 
While in Siri Eyes Free:
The display remains the same.
No feedback or commands appear.



Appears when Siri is activated in Siri Eyes Free

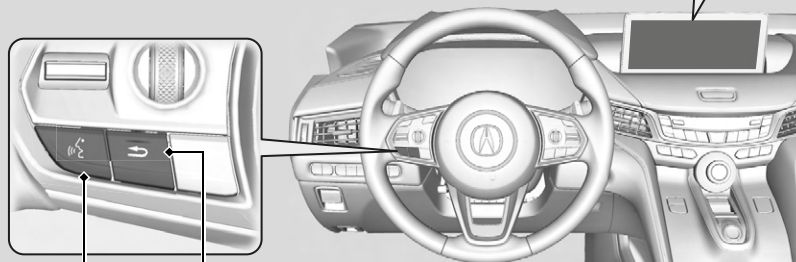


 **(Back) Button**
Press to deactivate Siri.

 **(Talk) Button**
Press and hold until the display changes as shown.
Press again to deactivate Siri.

▶▶ Siri Eyes Free


Siri is a trademark of Apple Inc.

Check Apple Inc. website for features available for Siri.

While driving we recommend only using Siri through the  button on the steering wheel (Siri Eyes Free).

▶▶ Using Siri Eyes Free

Some commands work only on specific phone features or apps.

Press the  (back) button on the True Touchpad Interface to deactivate Siri.