

Driving Position Memory System


You can store three driver's seat, front passenger's seat*, massage mode*, steering wheel*1 and door mirror*1 positions with the driving position memory system.

When you unlock and open the driver's door with a remote transmitter, or keyless access system, door mirrors adjust to one of the three preset positions*1 and the seat adjusts to retracted positions of one of the three preset positions automatically.

The steering wheel and the seat will move to the stored position when you set the power mode to ACCESSORY*1.

When you enter the vehicle, the display briefly shows you which remote transmitter you used to unlock the vehicle.

- **DRIVER 1** transmitter is linked to memory button 1.
- **DRIVER 2** transmitter is linked to memory button 2.

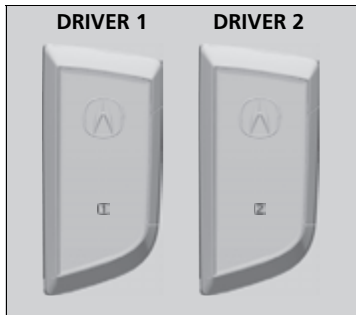

The driver's seat moves rearward and steering wheel fully up depending on the set seating position once you

- Stop the vehicle.
- Put the transmission in **[P]**.
- Turn the engine off.
- Open the driver's door.

Once the power mode is in the ACCESSORY position, the driver's seat and steering wheel moves to the **DRIVER 1** or **2** preset position.

*1: Driver's seat only

* Not available on all models

Driving Position Memory System

Using the audio/information screen, you can disable the automatic seat, steering wheel and door mirrors adjustment function.

➤ **Customized Features** P. 351

The driver's seat easy exit feature can be turned ON/OFF.

➤ **Customized Features** P. 351

System Operation

The system will not operate if:

- Either memory button is pressed while the seat or steering wheel are in motion.
- The seat or steering wheel position are adjusted while in operation.
- Either of the memorized positions is set fully to the rear.


Models with mode selector

- The mode selector is pressed up or down while in operation.

The system may not recognize a key if:

- The key is in close proximity to a cell phone or other wireless device.
- Both keys are in the vehicle at the same time.
- The Driving Position Memory System is disabled in customized features.
- Opening driver's door without fully grabbing door handle.

■ Storing a Position in Memory

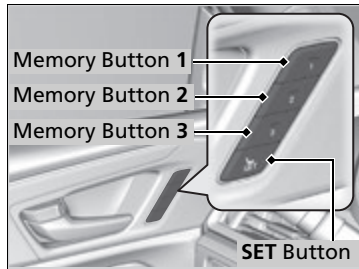

1. Set the power mode to ON. Adjust the driver's seat, front passenger's seat*, massage mode*, the steering wheel*¹ and the door mirrors*¹ to the desired position.
2. Press the **SET** button.
 - ▶ You will hear the beeper, and the memory button indicator light will blink.
3. Press and hold memory button **1**, **2**, or **3** within five seconds of pressing the **SET** button.
 - ▶ Once the seat, massage mode*, the steering wheel*¹ and the door mirror*¹ positions have been memorized, the indicator light on the button you pressed stays on and you will hear the double-beep.

*1: Driver's seat only

* Not available on all models

▶▶ Storing a Position in Memory


After you press the **SET** button, the storing operation will be canceled when:

- You do not press the memory button within five seconds.
- You readjust the seat, the steering wheel*¹ or the door mirror*¹ position before the double-beep.
- You set the power mode to any position except ON.

Models with mode selector

- You press the mode selector up or down.

■ Recalling the Stored Position

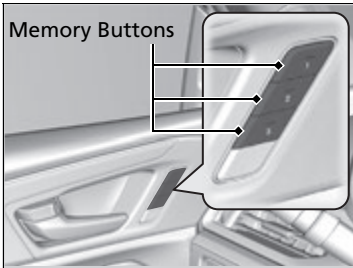

1. Put the transmission into **P**.
2. Apply the parking brake.
3. Press a memory button (**1**, **2**, or **3**).
 - ▶ You will hear the beeper, and the indicator light will blink.

The seat, massage mode*, the steering wheel*¹ and the door mirrors*¹ will automatically move to the memorized positions. When it has finished moving, you will hear the beeper, and the indicator light stays on.

*1: Driver's seat only

* Not available on all models

☒ Recalling the Stored Position

The seat, the steering wheel*¹ and the door mirrors*¹ will stop moving if you:

- Press the **SET** button or memory button **1**, **2**, or **3**.
- Adjust the seat position, door mirrors*¹, or steering wheel*¹.
- Put the transmission into a position other than **P**.

Models with mode selector

- Press the mode selector up or down.