


# Keyless Access

## Keyless Access System (if equipped)\*

When you carry the keyless access remote with you, you can lock and unlock the doors, unlock the trunk, and start the engine without using the built-in key. Make sure the driver always carries the keyless access remote.

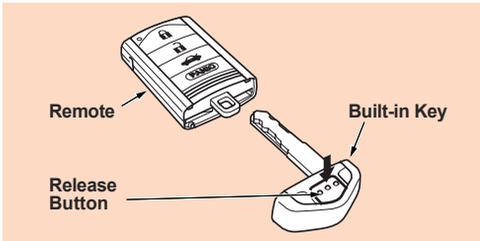

### For Valet Use


1. Pull the built-in key from the remote.
2. Lock the glove box and the trunk pass-through cover, and turn off the trunk main switch located in the glove box.
3. Keep the built-in key with you, and give the keyless remote to the valet.

With the trunk main switch turned off, the valet can only lock and unlock the doors and start the car. The glove box, trunk, and trunk pass-through will remain locked.

## Keyless Access Remote Slot\*

The keyless access remote slot is located on the dashboard, to the left of the engine start/stop button. The slot is for use in these instances:

- The keyless access remote battery dies
- There is a keyless access system problem
- Valet parking

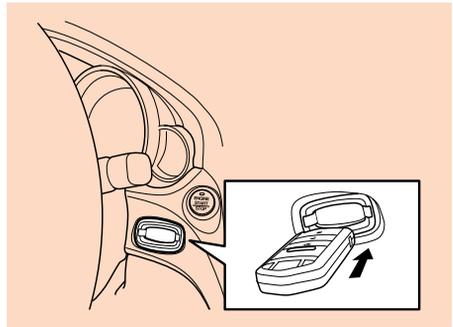


**To use:** Insert the keyless access remote into the slot, with the lock button side (not the side with the built-in key) forward, and push firmly.


**To remove remote:** Turn off the vehicle, wait a few seconds for the remote to unlock, then pull the remote firmly from the slot.

### Keyless Access System Mode Switch

Turn the switch off to disable the keyless access system. You will not be able to automatically unlock the doors or trunk, and you will not be able to start the engine without inserting the keyless remote into the keyless remote slot.

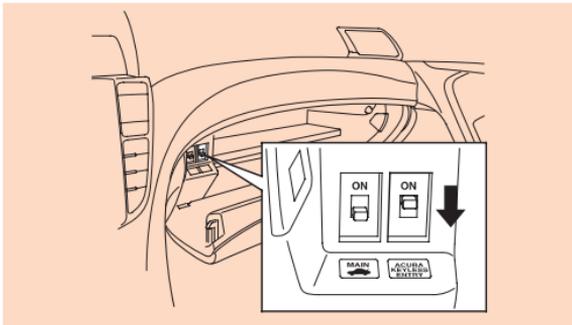


### Fuel Fill Door

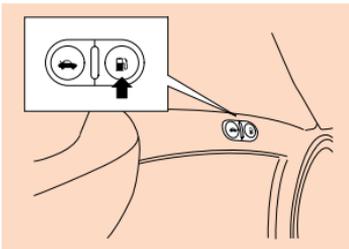

To open the fuel fill door, press the button on the driver's door.

### Keyless Entry With Remote Transmitter On Models Without Keyless Access System

The remote transmitters 1 and 2 are linked to the driver position memory system (DPMS), the climate control settings, the Keyless Memory Settings™ (on the MID), and the illumination settings. Depending on which remote transmitter unlocks the vehicle, those settings are chosen.

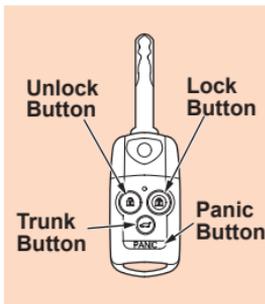

#### Unlock button:

- Press to unlock the doors.
- Press and hold a second time; the windows and moonroof open.
- Release the button to stop.

**Tip:** If you do not open a door within a set time in keyless memory settings, the doors relock.

**Lock button:** Press to lock all doors. Press again, and a beep sounds to verify that the doors are locked.

**Tip:** The doors will not lock if any door is not fully closed or the key is in the ignition switch.


**Trunk release button:** Press and hold until trunk opens.

**Tip:** The trunk will not open if the key is in the ignition.

**Panic button:** Press and hold for two seconds. Press any button on the remote transmitter or turn the ignition to ON (II) to turn off panic mode.

## Engine Start/Stop Button (if equipped)\*

After you get in your vehicle and shut the door, the following two messages will alternately appear on the MID, starting with "TO START ENGINE":

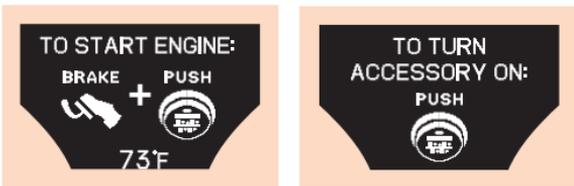

**To start the engine:** Press the brake and push the engine start/stop button. This is called the **On Mode**.

**To turn on accessories:** Push the start/stop button, without pressing the brake, to use accessories such as the audio system or the navigation system, without starting the engine. This is called the **Accessory Mode**.

**Tip:** If you try to start the vehicle without the keyless access remote inside, you will see "Insert Keyless Remote into Slot" in the MID. Make sure you are carrying the keyless access remote.

**Tip:** If you cannot start the engine, the steering wheel may be locked. A message will appear on the MID. Follow the instructions on the message.

## Turning Off the Engine\*

**To turn off the engine:** Put the transmission in Park (P), and press the engine start/stop button. If the transmission is not in Park (P), the message "Shift to Park (P)" will appear on the MID.



## Turning Off the Vehicle\*

If you open the driver's door in the Accessory mode, a beep sounds, and "TO TURN

VEHICLE OFF" appears on the MID. Press the engine start/stop button twice to turn off the vehicle. This is called the **Vehicle Off (Lock) Mode**.

## Emergency Shut Down\*

The engine start/stop switch may be used to stop the engine due to an emergency situation even while driving. If you must stop the engine while driving, do either of the following operations:

- Press and hold the engine start/stop button for three seconds.
- Firmly press the engine start/stop button three times.


Do not press the switch while driving unless it is absolutely necessary for the engine to be switched off.

If you are driving, the power mode will change to ACCESSORY. If the vehicle is stopped and in Park, the power mode will change to OFF. In either case, the steering wheel will not lock.

## Power Door Locks

Each door has a lock tab next to the inside door handle.


- Pull back on each passenger's door lock tab to lock the door.
- Push forward on each passenger's door lock tab to unlock the door.

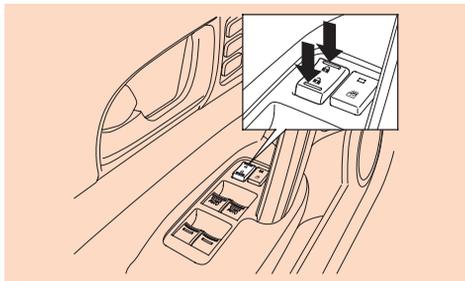

When the driver's door lock tab is pulled back, all doors are locked. Pushing forward on this locking tab unlocks only the driver's door. When any door is unlocked, you can see the red indicator on the lock tab.

**Tip:** You can customize if and when you want the doors to lock automatically. See *Auto Door Lock/Unlock in Personalized Settings*.

## Unlocking Doors When Equipped With Keyless Access System

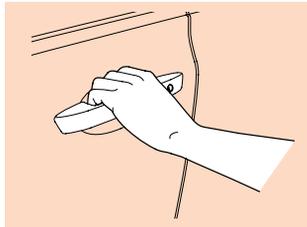

The handle of each front door has a sensor, which works with the remote so you can automatically unlock the door(s).

By default, only the driver's door unlocks when you touch its handle. Unlocking options are available, see your owner's manual.

All of the doors unlock when you touch the front passenger's door handle. If you do not open any of the doors within 30 seconds, they automatically relock.

*\* Check the owner's manual for additional information and instructions.*

Keyless Access