

# Overhead Controls

## Moonroof



The moonroof can be opened, closed, or tilted using the moonroof control switch.


- ▲ **Open:** Pull the switch fully back, then release it. The roof will open completely. To stop, briefly push forward on the switch.
- ▼ **Close:** Push the switch fully forward, then release it. The roof will close completely. To stop, briefly pull back on the switch.
- ☰ **Tilt:** Push straight up on the switch. The moonroof will tilt completely.

**Tip:** To partially open or close the moonroof, lightly move the switch to the first detent and hold it there. Release the switch and the roof will stop in the desired position.

**Note:** The front windows/moonroof can also be opened with the lock cylinder and the remote. See *Locks* in your owner's manual for more information.

## Ceiling Lights

All the front and rear ceiling lights can be operated both individually, and from the front seats.

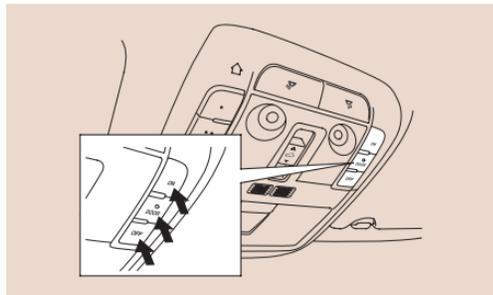

**ON button:** Push to turn on all ceiling lights.

**OFF button:** Push to turn off all ceiling lights.

**Door button:** Push to activate. When activated, all the lights come on when you open any door, unlock the doors with the remote or built-in key, or turn the ignition from ON (I) (or ON MODE) or ACCESSORY (I) (or ACCESSORY MODE), to OFF (or VEHICLE OFF/LOCK MODE). Push each ceiling light button to turn the light on or off.

**Tip:** The indicator in the button is on when it is activated.

## Courtesy Lights

**Doors:** The courtesy light in each front door comes on when the door is opened, and goes out when the door is closed.

**Sun visors:** The courtesy lights between the sun visors come on when the parking lights are turned on.

**Tip:** *You can adjust the brightness of the courtesy lights above with the instrument panel brightness control buttons (see Driver Controls).*


**Ignition Switch (without navigation):** Comes on when you open the driver's door, then fades around 30 seconds after you close the door.

**Keyless Access Remote Slot (with navigation):** Comes on when you open any door or unlock the driver's door, then fades around 30 seconds after you close or lock the driver's door.


## HomeLink®

The HomeLink Universal Transceiver built into your vehicle can be programmed to operate up to three remote controlled devices around your home, such as garage doors, lighting, or home security systems.

### Training a Button

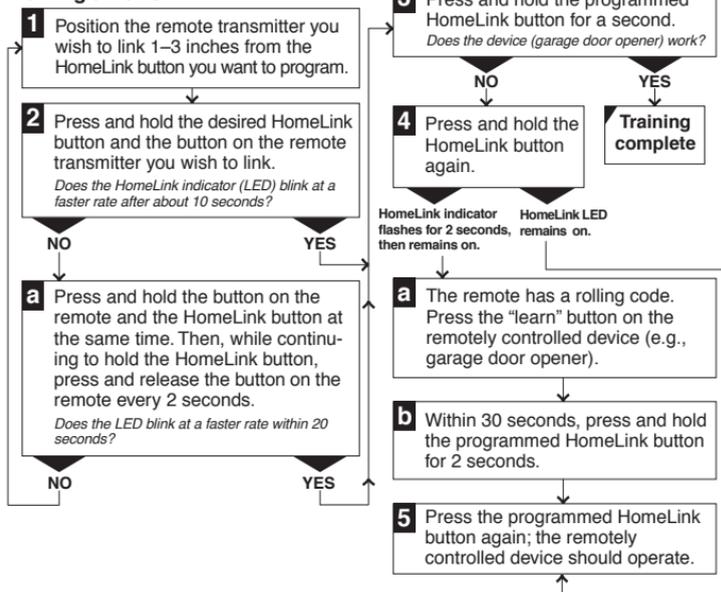

### Retraining a Button

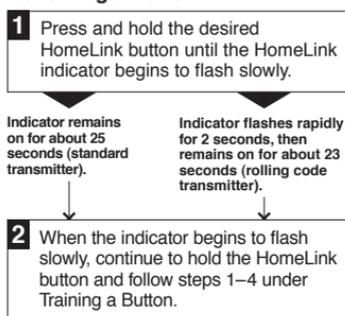

### Erasing Codes

To erase codes stored in all buttons, press and hold the two outer buttons until the HomeLink indicator begins to flash (about 10 to 20 seconds), then release the buttons. You should erase all three codes before selling the vehicle.

*If you have any problems programming HomeLink, see the owner's manual included with the device you are trying to program, call HomeLink at 1-800-355-3515, or go online to [www.homelink.com](http://www.homelink.com).*

\* Check the owner's manual for additional information and instructions.