

# TPMS

## Low Tire Pressure/TPMS Indicator\*



When this indicator comes on, one or more tires is significantly under-inflated. You should stop and check your tires as soon as possible, and if needed, inflate them to the proper pressure as indicated on the tire information placard, located on the driver's doorjamb.

**Tip:** *Tire pressure varies by temperature and other conditions.*

- *Check the tire pressure when the tires are cold. This means the vehicle has been parked for at least 3 hours or driven less than 1 mile.*
- *The indicator may come on when you first start your vehicle, then go off when friction raises the tire temperature. Even if the indicator goes off, always check the pressure and adjust as required.*
- *If the indicator blinks then stays on, have your dealer inspect the vehicle; there is a problem with the TPMS system.*

*\* Check the owner's manual for additional information and instructions.*