

Tire Pressure Monitoring System (TPMS)

TPMS turns on every time you start the engine. Using location and pressure indicators, this system monitors tire pressure, and allows you to check tire pressure from inside the vehicle.*

- Turn the ignition ON(II).
- Press the INFO (▼ or ▲) button to select the tire pressure monitor in the MID.
- Press the SEL/RESET button to display each tire's pressure in the MID.

