


# MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

## Accessing the MID




When you start the engine, the MID shows the last active display from the previous drive cycle.

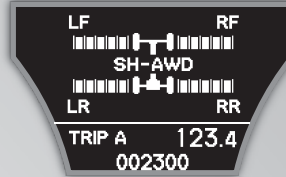


To toggle between the different displays, **press** either Info button (▲/▼) for the main displays and **press** the SEL/RESET button for the sub-displays.



## Main Displays

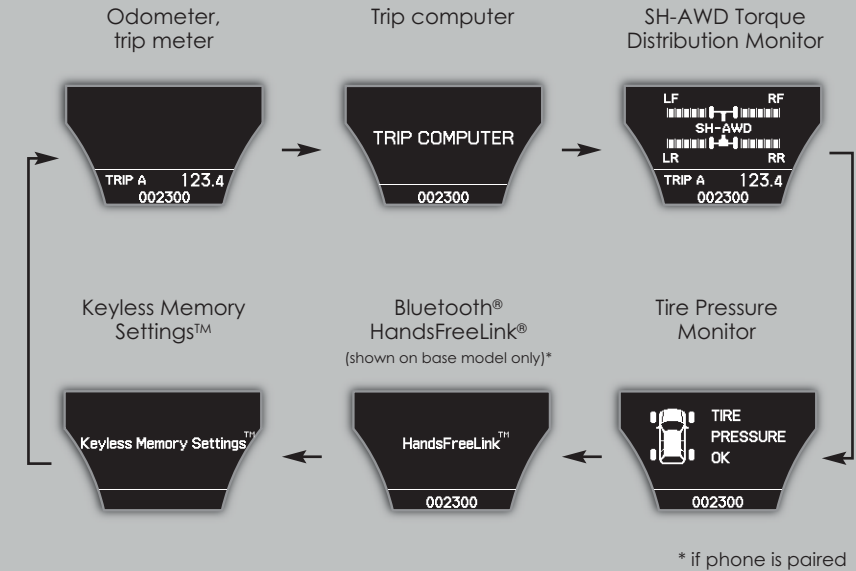

## Lower Displays

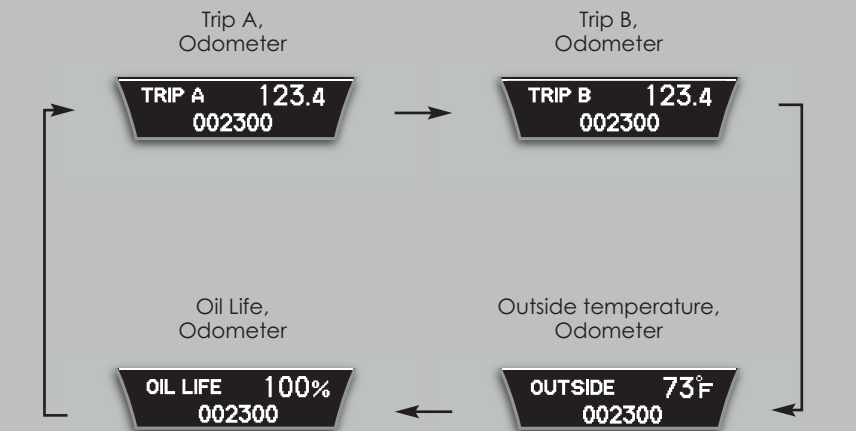

## Trip Computer



While on the Trip Computer display, **press** the SEL/RESET button to access trip information and to toggle through the various screens. **Press** either INFO (▲/▼) button to return to the Trip Computer main display.

