

Adaptive Cruise Control (ACC) (if equipped)


Allows you to follow a vehicle while maintaining a set speed. When the vehicle ahead changes speed, ACC senses the change in distance and automatically compensates.

Turning ACC On

1. Press the ACC button.



2. ACC appears on the MID.

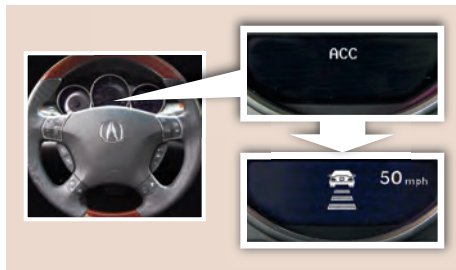


Switching Between ACC and Standard Cruise Control

1. Press and hold the Distance button.



2. The selected mode appears on the MID.

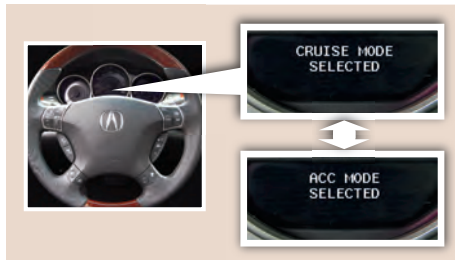


Using ACC

Similar to standard cruise control.

1. **Press** the ACC button to activate.




2. **Accelerate** to the desired speed (above 25 mph).

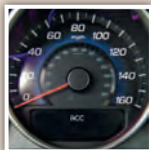

3. **Press and release** the SET/DECEL button, then **release** the accelerator pedal.



4. *To increase speed:*
Press and hold the RES/ACCEL button.
To decrease speed:
Press and hold the SET/DECEL button.

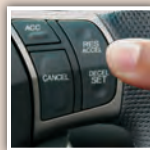

Canceling ACC

There are three ways to cancel:

- **Press** the ACC button.



- **Push** the CANCEL button.



- **Tap** the brake pedal.



Changing Vehicle Distance

This feature controls the distance between your vehicle and the vehicle in front of you.

How It Works


Press the Distance button to shuffle through three ranges. The selected range is shown on the MID.



The ACC automatically adjusts the following distance based on the range selected and your vehicle speed.

Range	MID Screen
Long	
Middle	
Short	

If there is no vehicle ahead of you within the ACC range, a dotted-line vehicle icon appears on the MID.

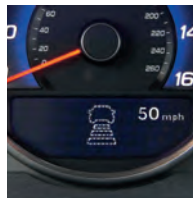

Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.