


Real-Time Traffic*

Provides continuously updated info, including traffic speed, incidents, and construction in major metro areas.

Press and release the NAVI Talk button before you give a command.

Displaying Traffic Information

Say "Display traffic"*** to view highway flow data.

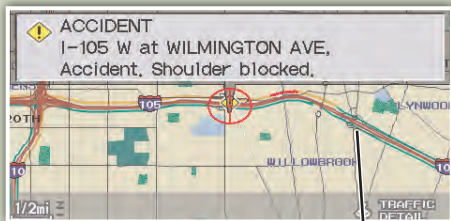


Traffic Flow Data

- Heavy traffic
- Moderate traffic
- Free-flow traffic

NOTE: Traffic flow and incident icons can only be displayed on map scales of 5 miles (8 km) or less.

Displaying Traffic Incidents

Say "Display traffic incidents"*** to view a list of incidents in your area or on your specific route, which are listed by distance from your current position.

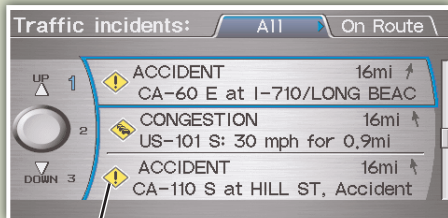

Incident Icons

- Accident
- Construction
- Congestion
- Road Closed

* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

** You can also display this information manually using the Interface Dial from the Map screen.


Real-Time Weather*

Provides current weather conditions, warnings, and forecasts in major metro areas.

Displaying Weather Icons

Press and release the NAVI Talk button before you give a command.

Say "Display weather"* to view weather icons for each city. These are available on all map scales.

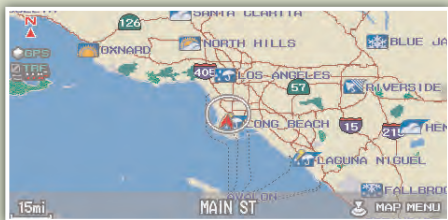


Checking Weather Forecasts and Warnings

1. Say "Display information."



 2. Say "Weather information."



To view the weather forecast: say "Current position" or "City vicinity."

To view weather warnings: say "Warning list sorted by distance."



* Subscription-based service through Sirius XM Radio® (free 90-day trial upon vehicle purchase)

** You can also display this information manually using the Interface Dial from the Map screen.

Voice Command/
HFL/Navigation