


Keyless Entry with Remote Transmitter

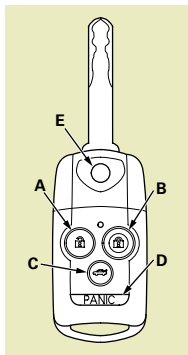

Remote transmitters 1 and 2 (identified on the back) are linked to the driver position memory system (DPMS), and the customized settings (in the MID).

A. Unlock Button

- Press once to unlock the doors as set in the customized settings.
- Press and hold a second time to open the windows and moonroof. Release the button to stop.

Tip: If a door is not opened within a set time, it relocks.

B. Lock Button

- Press once to lock all doors.
- Press again to hear a beep to verify that the doors are locked.

Tip: The doors will not lock if any door is not fully closed or the key is in the ignition switch. The beep will not sound if all the doors, the hood, and the trunk are not fully closed.

C. Trunk Release Button

Press and hold until trunk opens.

Tip: The trunk will not open if the key is in the ignition.

D. Panic Button

- To turn ON – Press and hold for two seconds (horn sounds, exterior lights flash).
- To turn OFF – Press any remote transmitter button or turn the ignition to ON (II).

Tip: The panic mode will not work if the ignition is in ON (II).

E. Release Button


Press this button to expose or retract the key.

Linking to the Remote Transmitters with DPMS

Remote transmitter 1 and 2 settings are stored separately. To link or unlink the remote transmitter, press and hold the Lock and Unlock buttons simultaneously until the LED blinks once (linked) or twice (unlinked).

Power Door Locks with Auto Window Open and Close Feature

- The master lock switch locks and unlocks all doors.
- Pull back on the driver's door lock tab to lock all doors. Push forward on the tab to unlock only the driver's door. The lock tabs on the other doors lock and unlock only that door.
- The doors can be locked and unlocked from the outside with the key.

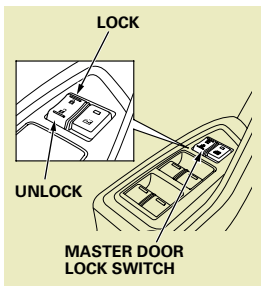

Unlock: To unlock only the driver's door from outside the driver's door, turn the key to the right and release. To unlock other doors, turn the key again. If you continue to hold the key on the second turn, the windows and moonroof open; release to stop.

Lock: To lock all the doors from outside the driver's door, turn the key to the left and release. If you turn the key again and hold, the windows and moonroof close; release to stop.

Note: The fuel fill door cannot be opened if the driver's door is locked (see Fuel).