

ADAPTIVE CRUISE CONTROL (ACC) (Advance Package)

Allows you to set a time or space interval between your vehicle and the vehicle ahead of you. When the vehicle ahead changes speed, ACC senses the change and maintains a set range.

Turning ACC On

1. Press MAIN.



2. ACC appears on the MID.




Switching Between ACC and Standard Cruise Control

1. Press and hold the Distance button for about one second.



2. The selected mode appears on the MID.

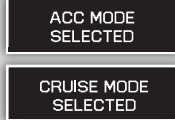

Using ACC

1. Press MAIN to activate.



2. Accelerate to the desired speed (above 25 mph).



3. Press and release SET/DECEL, then release the accelerator pedal.



4. To increase speed: Press and hold RES/ACCEL. To decrease speed: Press and hold SET/DECEL.



Canceling ACC

There are three ways to cancel:

• Press MAIN.



• Press CANCEL.



• Tap the brake pedal.



* Do not use ACC in heavy or stop-and-go traffic conditions.

Changing Vehicle Distance

Control the distance between your vehicle and the vehicle in front of you.

ACC automatically adjusts the following distance based on the range selected and your vehicle speed.



Press the Distance button to shuffle through three ranges.



The selected range and set speed are shown on the MID.

Range	MID Screen
Long	50 _{mph}
Middle	50 _{mph}
Short	50 _{mph}

If there is no vehicle ahead of you within the ACC range, a dotted-line vehicle icon appears on the MID.



Note: The ACC radar sensor in the front grille can detect and monitor the distance of a vehicle up to approximately 100 yards ahead.