

# INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.



## Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

 Charging system	 SH-AWD* (Super Handling-All Wheel Drive)
 Low brake fluid, Brake system	 Malfunction indicator lamp (check engine light)
 Low oil pressure	 VSA (Vehicle Stability Assist)
 SRS (Supplemental Restraint System)	 TPMS (blinks) (Tire Pressure Monitoring System)
 ABS (Anti-lock Brake System)	 EPS (Electronic Power Steering System)
 Keyless Access System*	

*\*if equipped*

## Condition Indicators

Action is needed by driver

 Parking brake on: Release	 Message indicator: See MID
 Seat belt reminder: Fasten seat belt(s)	 Low fuel: Refill
 Door/trunk open: Close door or trunk	 Low tire pressure (stays on): Add air

## On/Off Indicators

 PASSENGER AIRBAG OFF (above audio panel)	 Fog lights on
 SIDE AIRBAG OFF	 Headlights on
 VSA OFF	 Immobilizer (flashes): improperly coded key; use correct key
 CRUISE MAIN on	 Turn signals/hazards on
 CRUISE CONTROL on	 High beams on


# MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

## Accessing the MID




When you start the engine, the MID shows the last active display from the previous drive cycle.

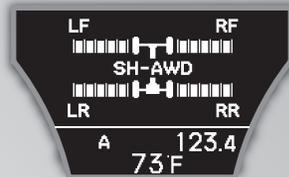


To toggle between the MID main displays, press either Info button (▲/▼).



## Main Displays

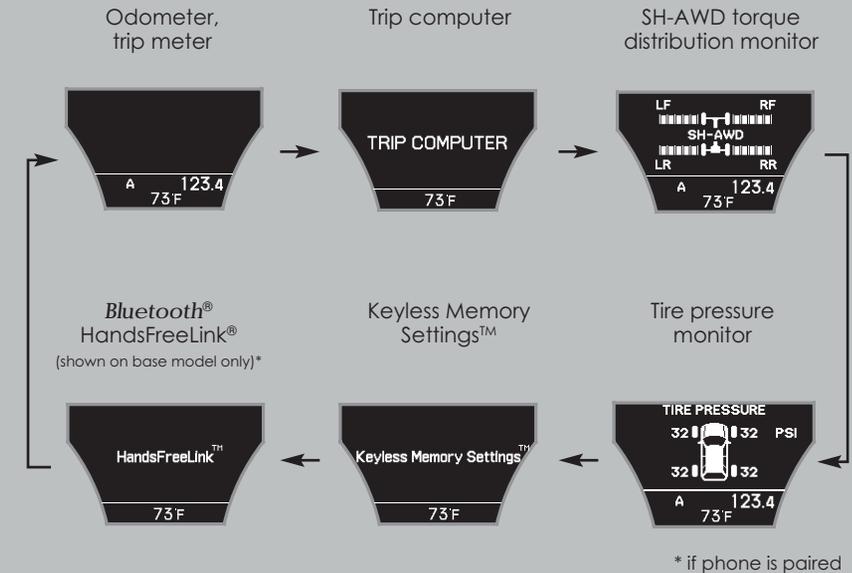


## Lower Displays

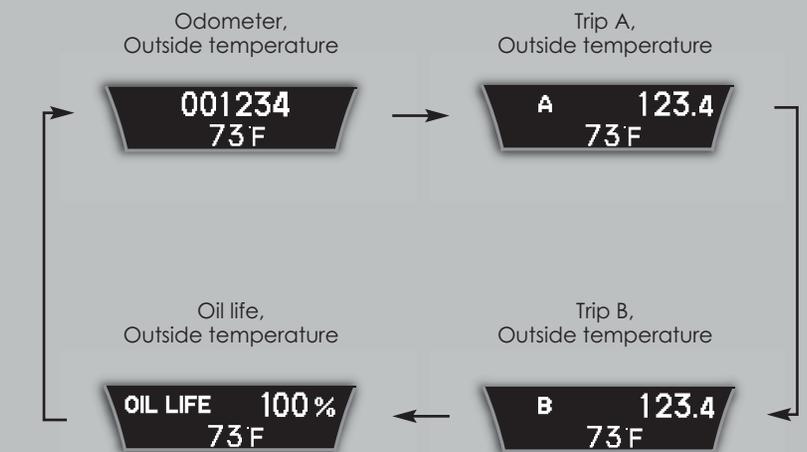

## Trip Computer



While on the Trip Computer display, press the SEL/RESET button to access trip information. Press either Info (▲/▼) button to toggle through the various screens, or the SEL/RESET button for sub-displays.

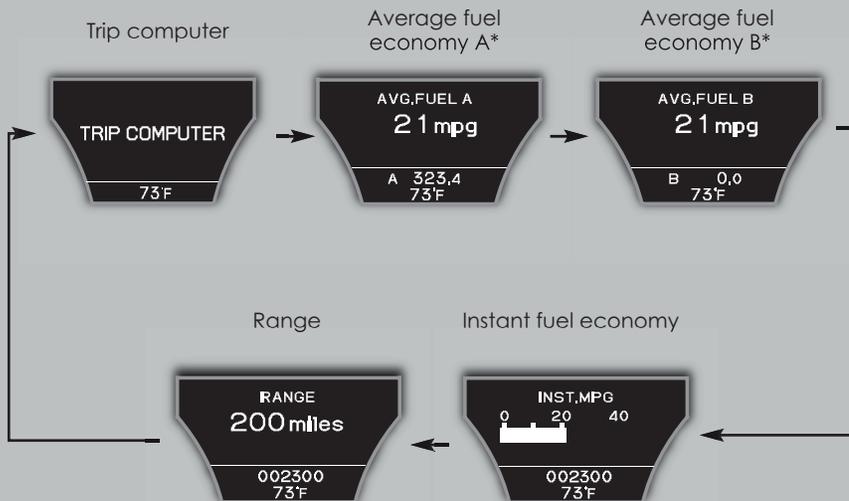

\*sub-displays available

## Tire Pressure Monitoring System

Alerts you when one or more of your tires has significantly low pressure. Toggle to the tire pressure monitor display to view pressure readings on the MID.

### How it Works



If the tire pressure drops significantly below recommended levels:

- The low tire pressure indicator comes on.
- A "CHECK TIRE PRESSURE" message appears on the MID, showing which tire(s) have low pressure.



### What to Do

1. Visually inspect the tires for damage.
2. Use a tire air pressure gauge (or check the MID) to check which tire(s) have low pressure.



3. Inflate the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.




## Customizing Settings Using the MID

Five groups of settings can be programmed using the MID\*: Meter Setup, Position Setup, Keyless Access Setup (if equipped), Lighting Setup, and Door/Window Setup.


### Programming the Auto Door Unlock Setting



Press the Info button to toggle to the "Keyless Memory Settings" display, then press SEL/RESET to activate the menu.

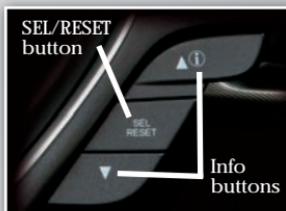

1. Select "CHG SETTING."

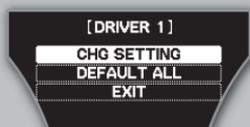

2. Select "DOOR/WINDOW SETUP."



3. Select "AUTO DOOR UNLOCK."



4. Select "SHIFT TO P."



5. Select "ALL DOORS."



6. Once the setting has been saved, select "EXIT."



\* See "Customize Settings" in your owner's manual for other programmable settings.