


Customizing Settings Using the MID

Five groups of settings can be programmed using the MID*: Meter Setup, Position Setup, Keyless Access Setup (if equipped), Lighting Setup, and Door/Window Setup.

Programming the Auto Door Unlock Setting



Press the Info button to toggle to the "Keyless Memory Settings" display, then press SEL/RESET to activate the menu.

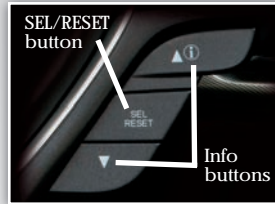

1. Select "CHG SETTING."



2. Select "DOOR/WINDOW SETUP."



3. Select "AUTO DOOR UNLOCK."



4. Select "SHIFT TO P."



5. Select "ALL DOORS."



6. Once the setting has been saved, select "EXIT."



* See "Customize Settings" in your owner's manual for other programmable settings.

KEYLESS MEMORY SETTINGS

Each remote (labeled 1 or 2 on the back) activates its own set of programmable audio, climate, driving position memory, and customized settings (MID).

Checking the Remote

1. Verify that you are using the correct remote by turning the vehicle on.



2. Check the MID:

- If you have the correct remote, the driver ID that appears first on the MID will match the ID number on the back of your remote. Go to step 3.



- If the numbers do not match, follow these simple instructions:

- Turn the vehicle off.



- Press the unlock button on your remote.



- Turn the vehicle on again, and check the MID. The driver ID that appears first on the MID should now match the number on the back of your remote.



3. Once you have the correct remote, you can begin to program your Keyless Memory settings.

Tech model shown