

# Climate Control Without Navigation

## Climate Control Without Navigation

### Auto Button

Automatically selects the proper mix of conditioned/heated air and adjusts the fan speed and airflow levels.

### Driver's Side Display

### Display

### Passenger's Side Display

### Mode Control Button:


Selects different vents for airflow.

### ON/OFF Button:

Shuts the system on and off.

**SYNC Button:** Allows for setting temperatures separately.

**Fan Control Button:** Controls the fan speed.

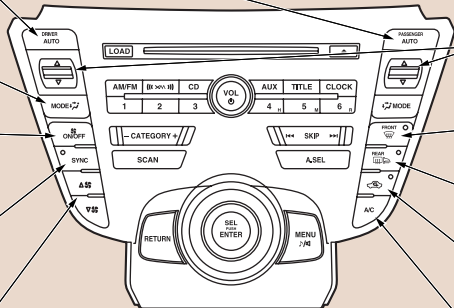

### Temperature Control

**Switches:** Sets the interior temperature. Front passenger's independently adjusted from the driver's when the DUAL button is pressed.

### Windshield Defrost Button

**Rear Window Defogger/Heated Mirror Button:**

### Recirculation Button:

Changes between Recirculation mode and Fresh Air mode.

### A/C Button