

XM Satellite Radio

XM® Satellite Radio

XM Satellite Radio provides over 170 channels of digital entertainment. A required monthly subscription is sold separately. Reception of the XM signal may vary, depending on location.

XM contact information for channel lineup and Listener Care: www.xmradio.com or (800) 967-2346.

XM Satellite Radio button: Selects satellite radio and switches between XM1 and XM2 bands.

TUNE bar: Changes the channel by pressing either side (◀ or ▶).

Preset buttons/icons: Select the desired channel (1–6) stored in a band (XM1/XM2). *To store a channel*, press and hold the desired button until you hear a beep, then release.

Title Button: Switches between the channel mode and the category mode when pressed and held for at least 2 seconds. Each time you press and release, the display changes to channel name, channel number, category, artist's name, and song title.

Category Bar: Press either side of the bar to select another category (▼ or ▲).

Tip: XM Satellite Radio does not always transmit the artist's name or the song title.

SKIP bar: Press and release <<| to skip up, or |>> to skip down to another category.

Tip: In the category mode, you can select only channels within that category.

SCAN button: Turns Scan on and off, which samples all channels for 5 seconds.