

# BLIND SPOT INFORMATION (BSI) SYSTEM (Advance Package)

Assists you in determining if there are vehicles in your blind spots.

## How It Works

A radar sensor on each corner of the rear bumper alerts you to a detected vehicle in your blind spot.

Passing and passed



Lane change



Merging



Conflict



Minimum operating speed: 6-7 mph

When a vehicle is detected in your blind spot, the blind spot indicator turns on and stays lit until the area is clear.



When your turn signal is on and a vehicle is detected, the blind spot indicator blinks until the area is clear or the turn signal is turned off.



## Turning BSI Off/On



Press the BSI OFF button on the dashboard to turn BSI off or on.



A message briefly appears on the MID screen showing the system status.