








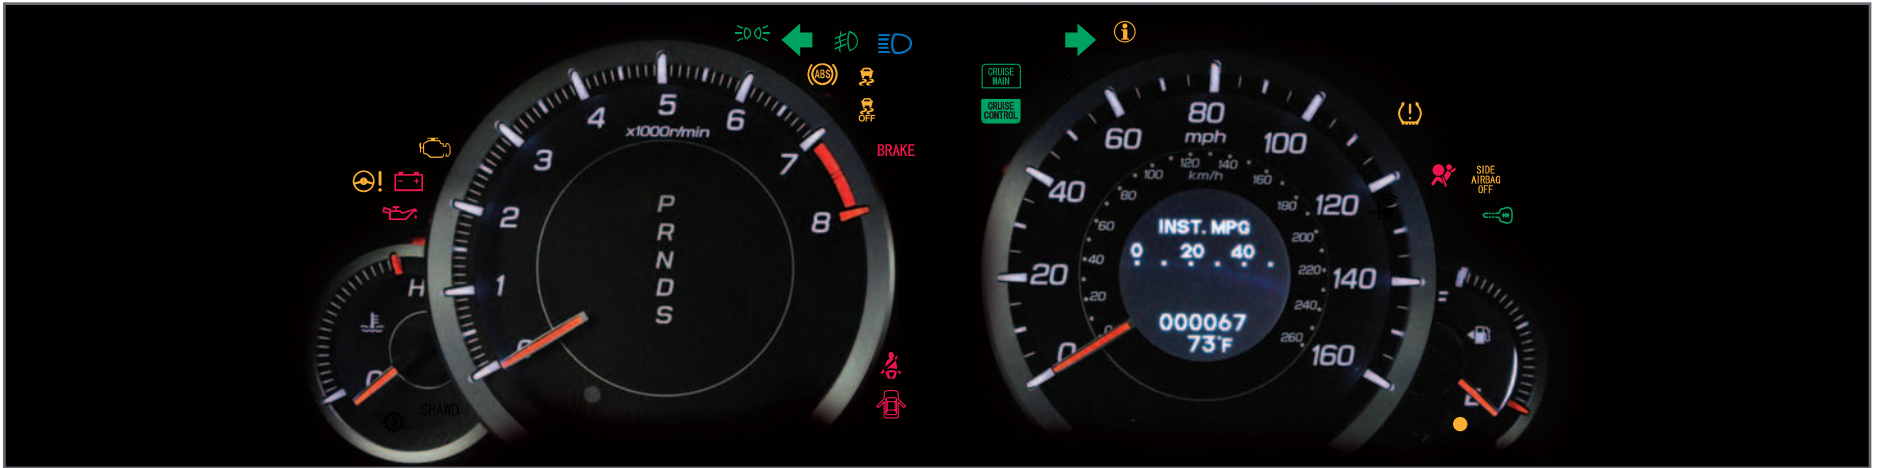


INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.









Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer

- | | |
|---|---|
|  Charging system |  Malfunction indicator lamp (check engine light) |
|  Low brake fluid, Brake system |  VSA (Vehicle Stability Assist) |
|  Low oil pressure |  TPMS (blinks) (Tire Pressure Monitoring System) |
|  SRS (Supplemental Restraint System) |  EPS (Electric Power Steering) |
|  ABS (Anti-lock Brake System) | |

Condition Indicators

Action is needed by driver

- | | |
|--|---|
|  Parking brake on: Release |  Message indicator: See MID |
|  Seat belt reminder: Fasten seat belt(s) |  Low fuel: Refill |
|  Door/trunk open: Close door or trunk |  Low tire pressure (stays on): Add air |

On/Off Indicators

- | | |
|--|---|
|  PASSENGER AIRBAG OFF (above audio panel) |  Immobilizer (blinks): improperly coded key; use correct key |
|  SIDE AIRBAG OFF |  Headlights on |
|  VSA OFF |  Turn signals/hazards on |
|  CRUISE MAIN on |  Fog lights on |
|  CRUISE CONTROL on |  High beams on |