

KEYLESS ACCESS SYSTEM (Tech/Advance Package)

Operate certain functions of your vehicle by simply having the remote within operating range.


Unlocking the Doors



Grab either one of the front door handles.



Locking the Doors

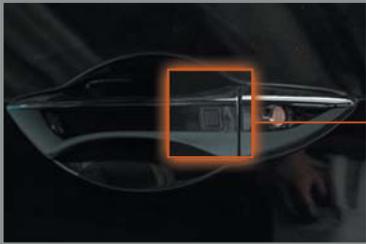

Press the door lock button on either front door handle.



Opening the Tailgate



Press the tailgate release switch.



Engine Start/Stop Button

Accessory Mode

Use audio, power sockets, power windows, etc., without turning the engine on.



Press the ENGINE START/STOP button once (without pressing the brake pedal).



Starting the Engine



Press and hold the brake pedal, then **press** the ENGINE START/STOP button.



Turning the Engine Off



Shift to Park, then **press** the ENGINE START/STOP button.



MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

Accessing the MID




When you start the engine, the MID shows the last active display from the previous drive cycle.




To toggle between the different displays, **press** either Info button (▲/▼) for the main displays and **press** the SEL/RESET button for the sub-displays.



Main Displays

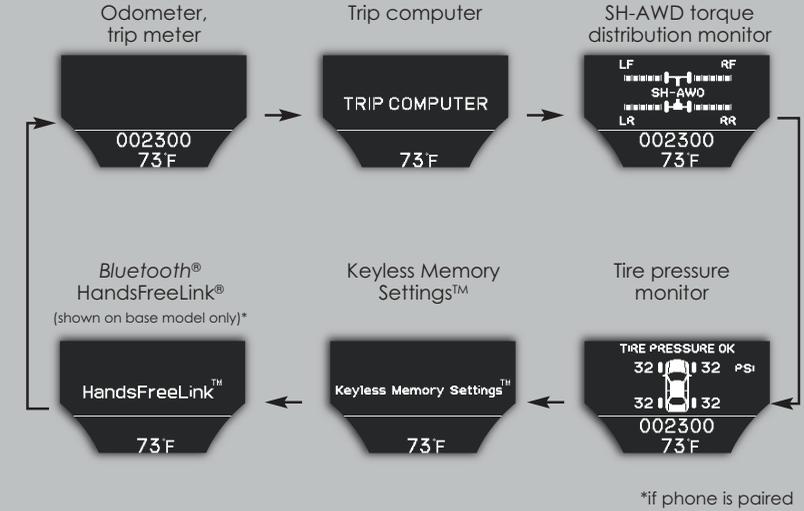



Lower Displays

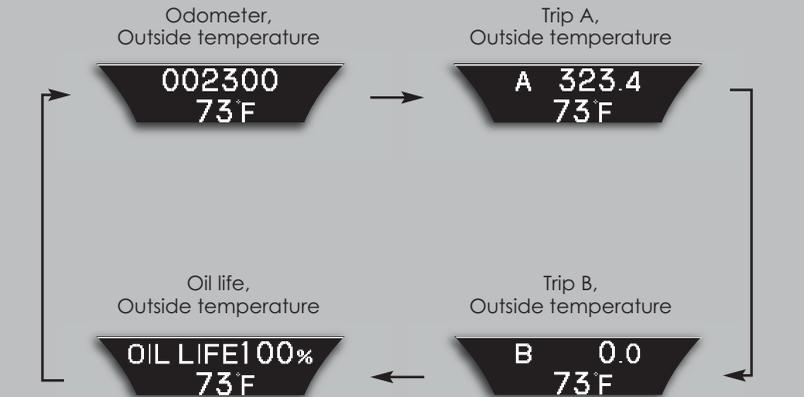

Trip Computer



While on the Trip Computer display, **press** the SEL/RESET button to access trip information. **Press** either Info (▲/▼) button to toggle through the various screens, or the SEL/RESET button for sub-displays.

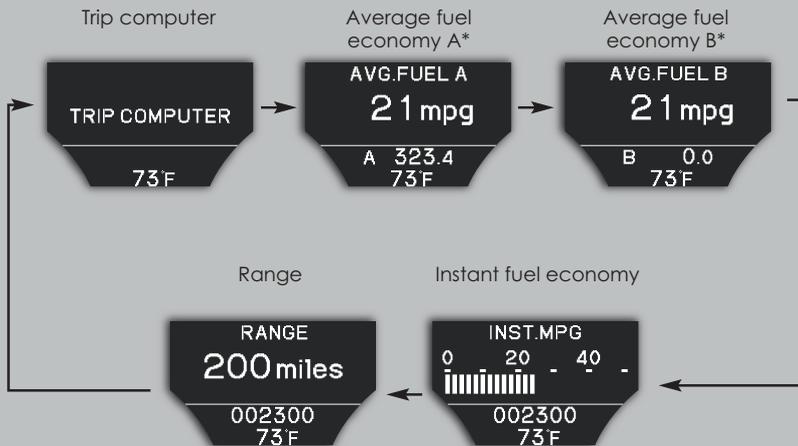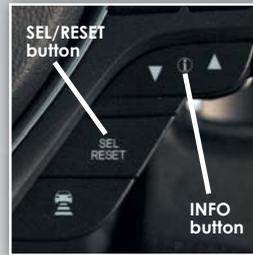

*sub-displays available

Tire Pressure Monitoring System

Alerts you when one or more of your tires have significantly low pressure. **Toggle** to the tire pressure monitor display to view pressure readings on the MID.

How It Works



If the tire pressure drops significantly below recommended levels:

- The low tire pressure indicator comes on.
- A "CHECK TIRE PRESSURE" message appears on the MID, showing which tire(s) have low pressure.



What to Do

1. **Visually inspect** the tires for damage.
2. **Use** a tire air pressure gauge (or check the MID) to **check** which tire(s) have low pressure.



3. **Inflate** the tire(s), if necessary, to the recommended pressures listed on the label on the driver's doorjamb.



Customizing Settings Using the MID


Six groups of settings can be programmed using the MID*: Adaptive Cruise Control (ACC) Setup (if equipped), Meter Setup, Position Setup, Keyless Access Setup (if equipped), Lighting Setup, and Door/Window Setup.

Modifying the Auto Door Unlock Setting


As the default setting, only the driver's door unlocks when you shift to Park. Follow the steps below to set all doors to unlock when you shift to Park:



Press the Info button to toggle to the "Keyless Memory Settings" display, then **press** SEL/RESET to activate the menu.

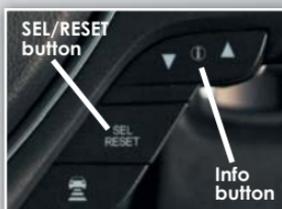

1. Select "CHG SETTING."

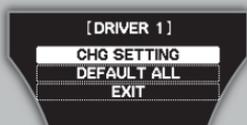


2. Select "DOOR/WINDOW SETUP."



3. Select "AUTO DOOR UNLOCK."



4. Select "SHIFT TO P."

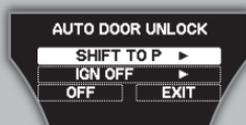

5. Select "ALL DOORS."



6. Once the setting has been saved, **select** "EXIT."



* See Customized Settings in your Owner's Manual for other programmable settings.