



 







INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information.









Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.










 
- | | |
|---|---|
|  Charging system |  Malfunction lamp (check engine light) |
|  Low brake fluid, Brake system |  VSA [®] (Vehicle Stability Assist) |
|  Low oil pressure |  TPMS (blinks) (Tire Pressure Monitoring System) |
|  SRS (Supplemental Restraint System) |  EPS (electric power steering) |
|  ABS (Anti-lock Brake System) | |
|  Keyless Access System | |

Condition Indicators

Action is needed by driver.

- | | |
|--|--|
|  Parking brake on: Release |  Message indicator: See MID |
|  Seat belt reminder: Fasten seat belt(s) |  Low fuel: Refill |
|  Low tire pressure (stays on): Add air |  Door/trunk open indicator: Close door/trunk |

On/Off Indicators

- | | |
|---|--|
|  PASSENGER AIRBAG OFF (next to screen) |  Headlights on |
|  SIDE AIRBAG off |  Turn signals/hazards on |
|  VSA off |  Fog lights on |
|  CRUISE MAIN on |  High beams on |
|  CRUISE CONTROL on | |
|  Immobilizer (flashes): improperly coded key; use correct key | |