

Tire Pressure Monitoring System

Alerts you when one or more of your tires have significantly low pressure. **Toggle** to the tire pressure monitor display to view pressure readings on the MID.

How It Works



If the tire pressure drops significantly below recommended levels:

- The low tire pressure indicator comes on.
- A "CHECK TIRE PRESSURE" message appears on the MID.
- The tire(s) icon showing low pressure blinks.



What to Do

Inflate the tire(s) to the recommended pressures listed on the label on the driver's doorjamb.

