


# SMS TEXT MESSAGING

Receive and send text messages from your paired and linked phone using Bluetooth® HandsFreeLink®. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.

## Receiving Text Messages

Use the audio selector knob to make and enter selections.



1. A notification appears on the multi-information display. **Select** Yes to open the message.
2. The message is displayed, and the system reads it aloud.

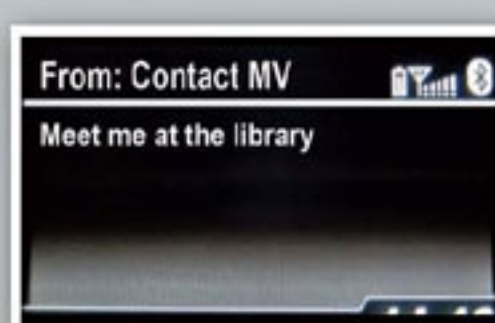


## Replying to Text Messages

Use the audio selector knob to make and enter selections.

1. With the message open, **press** the selector knob to enter the Text Message menu.
3. **Select** one of the six available reply messages.

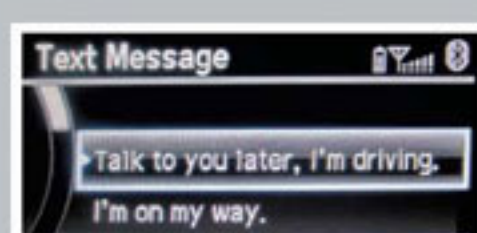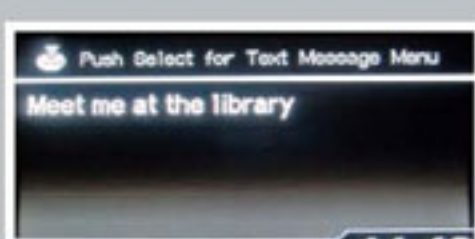

2. **Select** Reply.

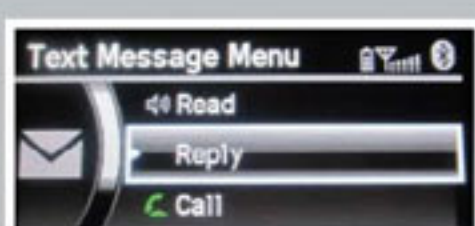



4. **Select** Yes to send the message.




## Calling the Sender

Use the audio selector knob to make and enter selections.

1. With the message open, **press** the selector knob to enter the Text Message menu.
3. HFL begins dialing the number.

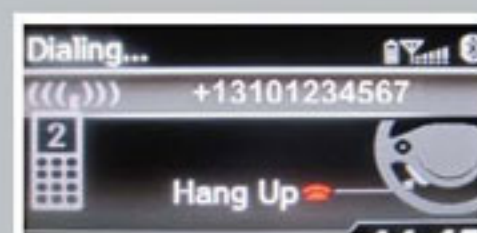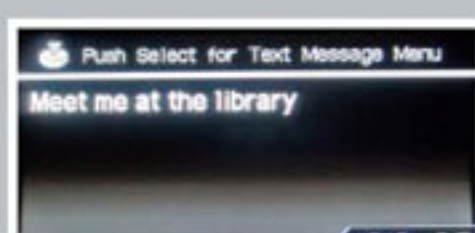


2. **Select** Call.

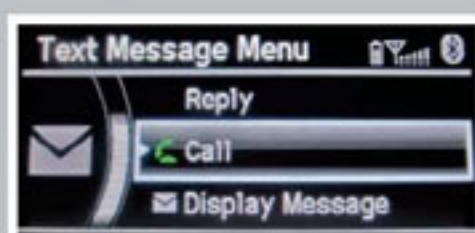

## Displaying Messages

Use the audio selector knob to make and enter selections.

1. **Press** PHONE or the Pick-Up button to go to the Phone menu.
3. **Select** a message to open it and hear it read aloud.

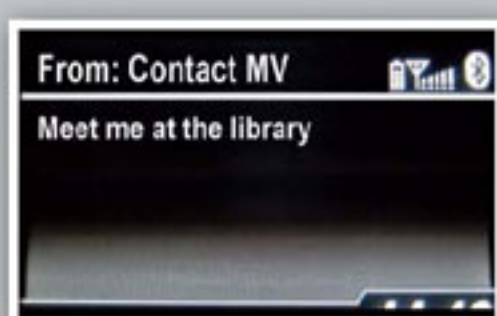

2. **Select** Text Message. The 20 most recent text messages from your phone are displayed.

