

BLUETOOTH® HANDSFREELINK®

Make and receive phone calls through your vehicle's audio system. Visit www.acura.com/handsfreelink to check if your phone is Bluetooth-compatible.

To prevent driver distraction, certain manual functions may be inoperable or grayed out while the vehicle is moving. Voice commands are always available.


Using HFL

Pick-Up button: Answer an incoming call, or go directly to the Cellular Phone screen.

Hang-Up button: End a call or decline a call.

Talk button: Give HFL commands.

Back button: Cancel a command and return to the previous screen.

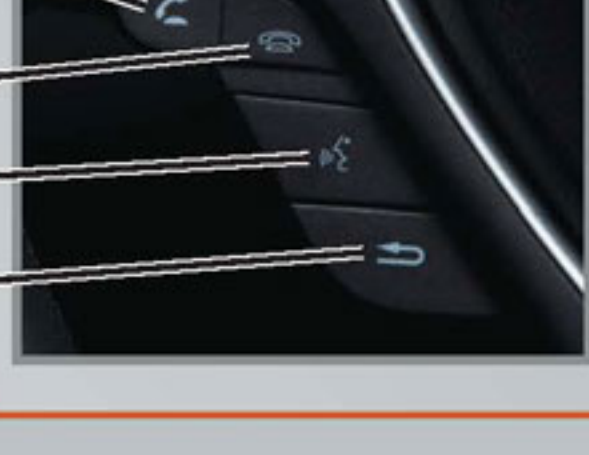


Pairing Your Phone


Use this pairing method if no phone has ever been paired to the system. You can only pair your phone when the vehicle is stopped.

Press and release the Talk button before you say a command.


1. Press the Pick-Up button to access the Cellular Phone screen. A prompt appears. Say "Yes."

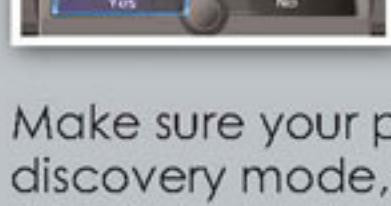

2. Make sure your phone is in discovery mode, and say "OK."

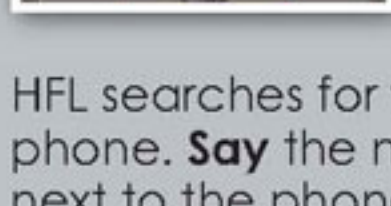


3. HFL searches for your phone. Say the number next to the phone when it appears on the list.

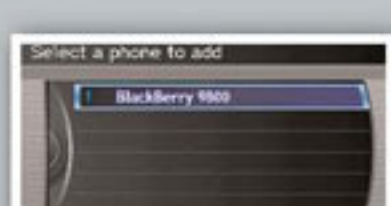

If your phone does not appear:

Say "Phone Not Found" and search for HandsFreeLink from your phone. Connect to HFL.

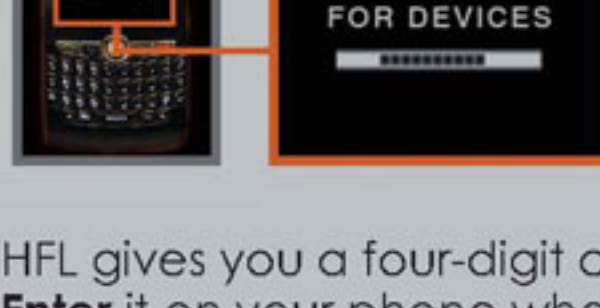

4. HFL gives you a four-digit code. Enter it on your phone when prompted. Say "OK" to complete.



Use this pairing method when a phone has already been paired to the system, or when you want to pair an additional phone.

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to access the Cellular Phone screen.



If a prompt appears asking to connect to a phone, say "No."

2. Say "Phone setup."




3. Say "Connection."



4. Say "Add New Phone."



5. Make sure your phone is in discovery mode, and say "OK."

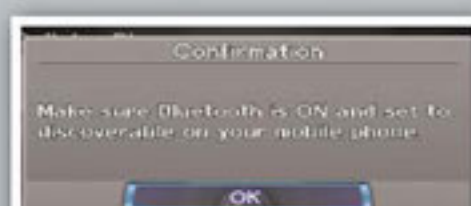

6. HFL searches for your phone. Say the number next to the phone when it appears on the list.




If your phone does not appear:

Say "Phone Not Found" and search for HandsFreeLink from your phone. Connect to HFL.



7. HFL gives you a four-digit code. Enter it on your phone when prompted. Say "OK" to complete.

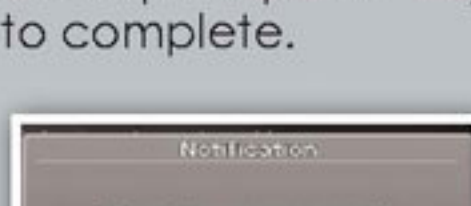


Making a Call

Dialing a Number

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to access the Cellular Phone screen.

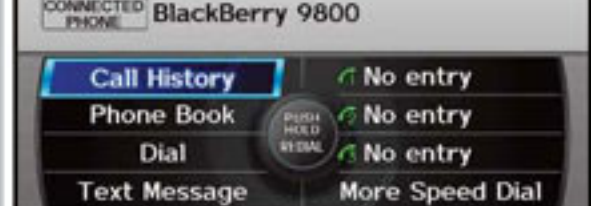


2. Say "Dial."



3. Say the entire phone number.




4. Say "Dial" to begin the call.

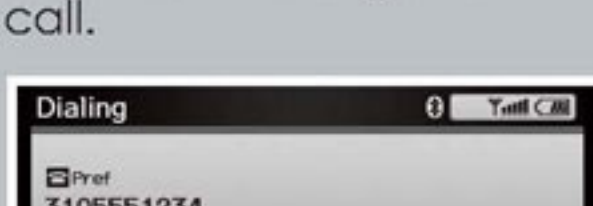

Using the Imported Phonebook*

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to access the Cellular Phone screen.

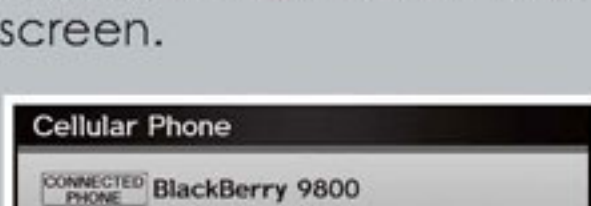


2. Say "Phonebook."



3. Say "Up" or "Down" to find the name you want to call.



4. Say the number next to the entry to begin the call.

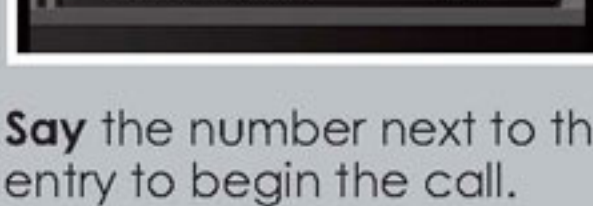


* Visit www.acura.com/handsfreelink to check if this feature is available on your phone.


Using Speed Dial and Voice Tags

Press and release the Talk button before you say a command.


1. Press the Pick-Up button to access the Cellular Phone screen.

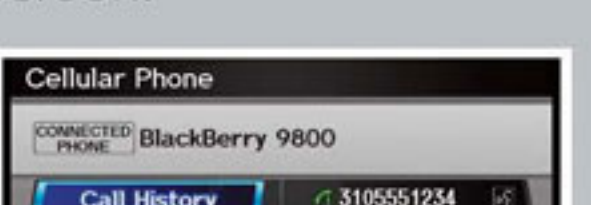


2. Say the number next to one of the first three entries (for example, "One"). For the complete list of speed dial entries, say "More speed dial."

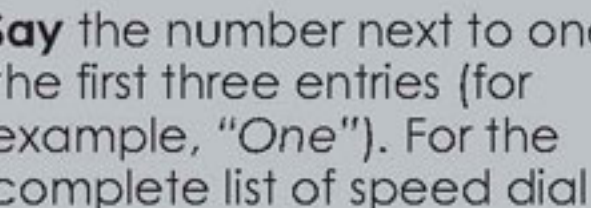

If an entry has a stored voice tag, say "Dial by voice tag," followed by the voice tag name and "Dial" from any screen.

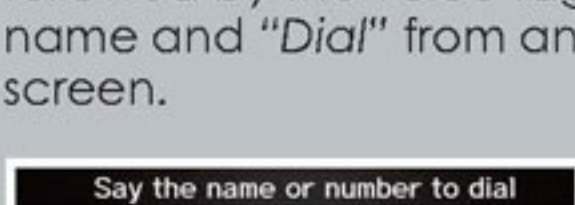

3. The call is connected and heard through the speakers.

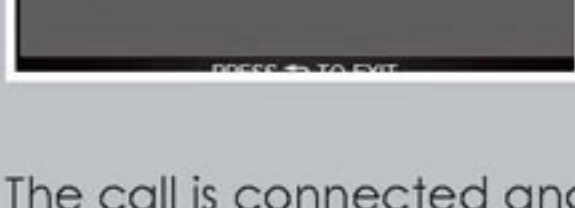


Note: See your Navigation Manual for instructions on storing speed dial entries and voice tags.

Receiving a Call


When you receive an incoming call, you hear a notification and see the following pop-up message:



Press the Pick-Up button to accept the call.

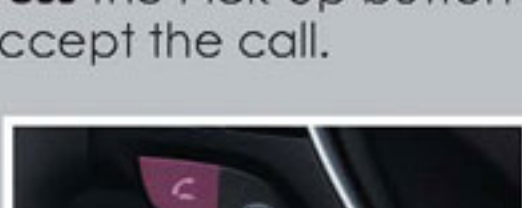

Press the Hang-Up button to end or decline the call.

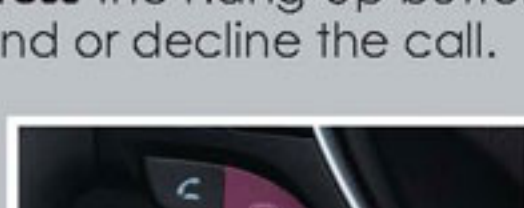

To reduce the potential for driver distraction, certain functions may be inoperable or grayed out while the vehicle is moving. You may have to use voice commands, stop or pull over to perform the function.

The chart below shows a list of some operations that are restricted while the vehicle is moving.

Driver Distraction

Function	Restriction Level While Driving
HFL System (Without Navigation)	
10-key dial	Restricted
Phonebook	Restricted
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Not restricted.
Redial	Not restricted
Connect to a new phone	Restricted
Connect to a previously paired phone	Not restricted
Manual dial tones	Restricted
Read text	Restricted
Reply to text	Not restricted
HFL System (With Navigation)	
10-key dial	Voice command only
Phonebook	Voice command only. Limited to three screens
Speed dial	Not restricted
Speed dial setup	Restricted
Call history	Not restricted
Call history scroll	Voice command only. Limited to three screens
Redial	Not restricted
Connect to new phone	Restricted