


# SMS TEXT MESSAGING

Receive and send text messages from your paired and linked phone using *Bluetooth® HandsFreeLink®*. Visit [www.acura.com/handsfreelink](http://www.acura.com/handsfreelink) to see if this feature is compatible on your phone. Standard message rates apply. This feature is limited while the vehicle is moving.


## Receiving Text Messages

Press and release the Talk button before you say a command.

1. A notification appears on the navigation screen when you receive a text message.

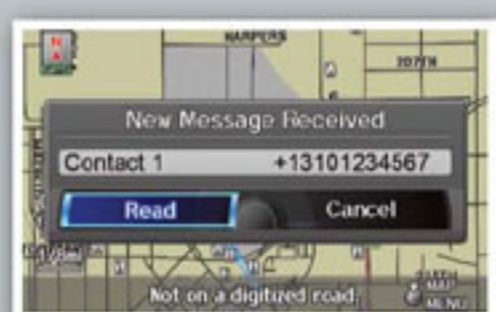


2. Say "Read" to open the message. The message is displayed, and the system reads it aloud.

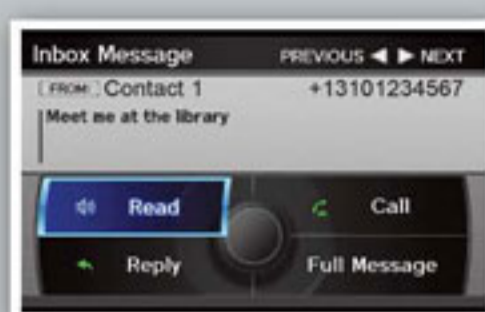

## Replying to Text Messages

Press and release the Talk button before you say a command.


1. With the message open, say "Reply."

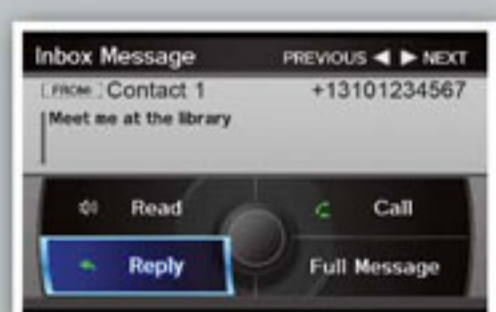


3. Say "Send" to send the message.



2. Say the number next to one of the six available reply messages.

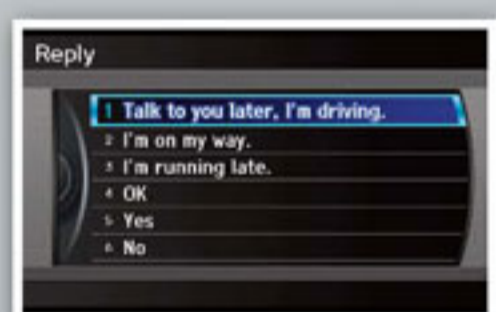


4. A notification appears after the message is sent.

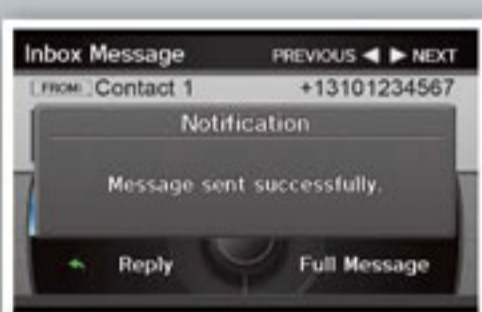


## Calling the Sender

Press and release the Talk button before you say a command.

1. With the message open, say "Call."

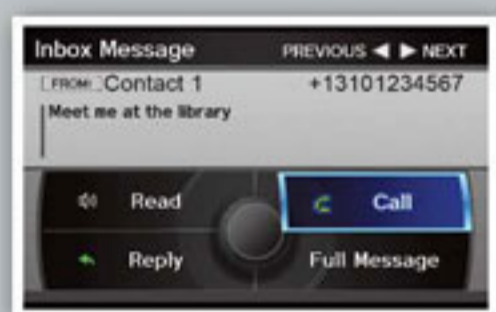


2. HFL begins dialing the number.

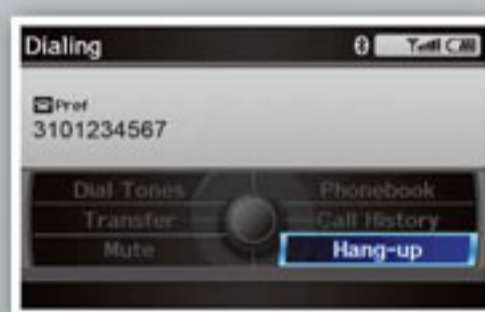

## Displaying All Messages

Press and release the Talk button before you say a command.

1. Press the Pick-Up button to go to the Cellular Phone menu.

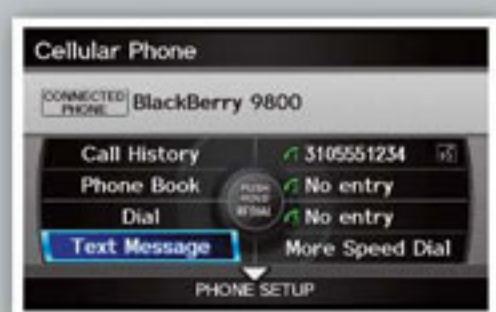

3. Say the number next to the message you want. The message is displayed, and the system reads it aloud.



2. Say "Text Message." The 20 most recent text messages from your phone are displayed.

