

# MULTI-INFORMATION DISPLAY (MID)

Consists of several displays that provide you with useful information.

## Accessing the MID



When you start the engine, the MID shows the last active display from the previous drive cycle.




To toggle between the MID main displays, **press** either Info button (▲/▼).


To toggle between the lower displays, **press** SEL/RESET.



## Main Displays

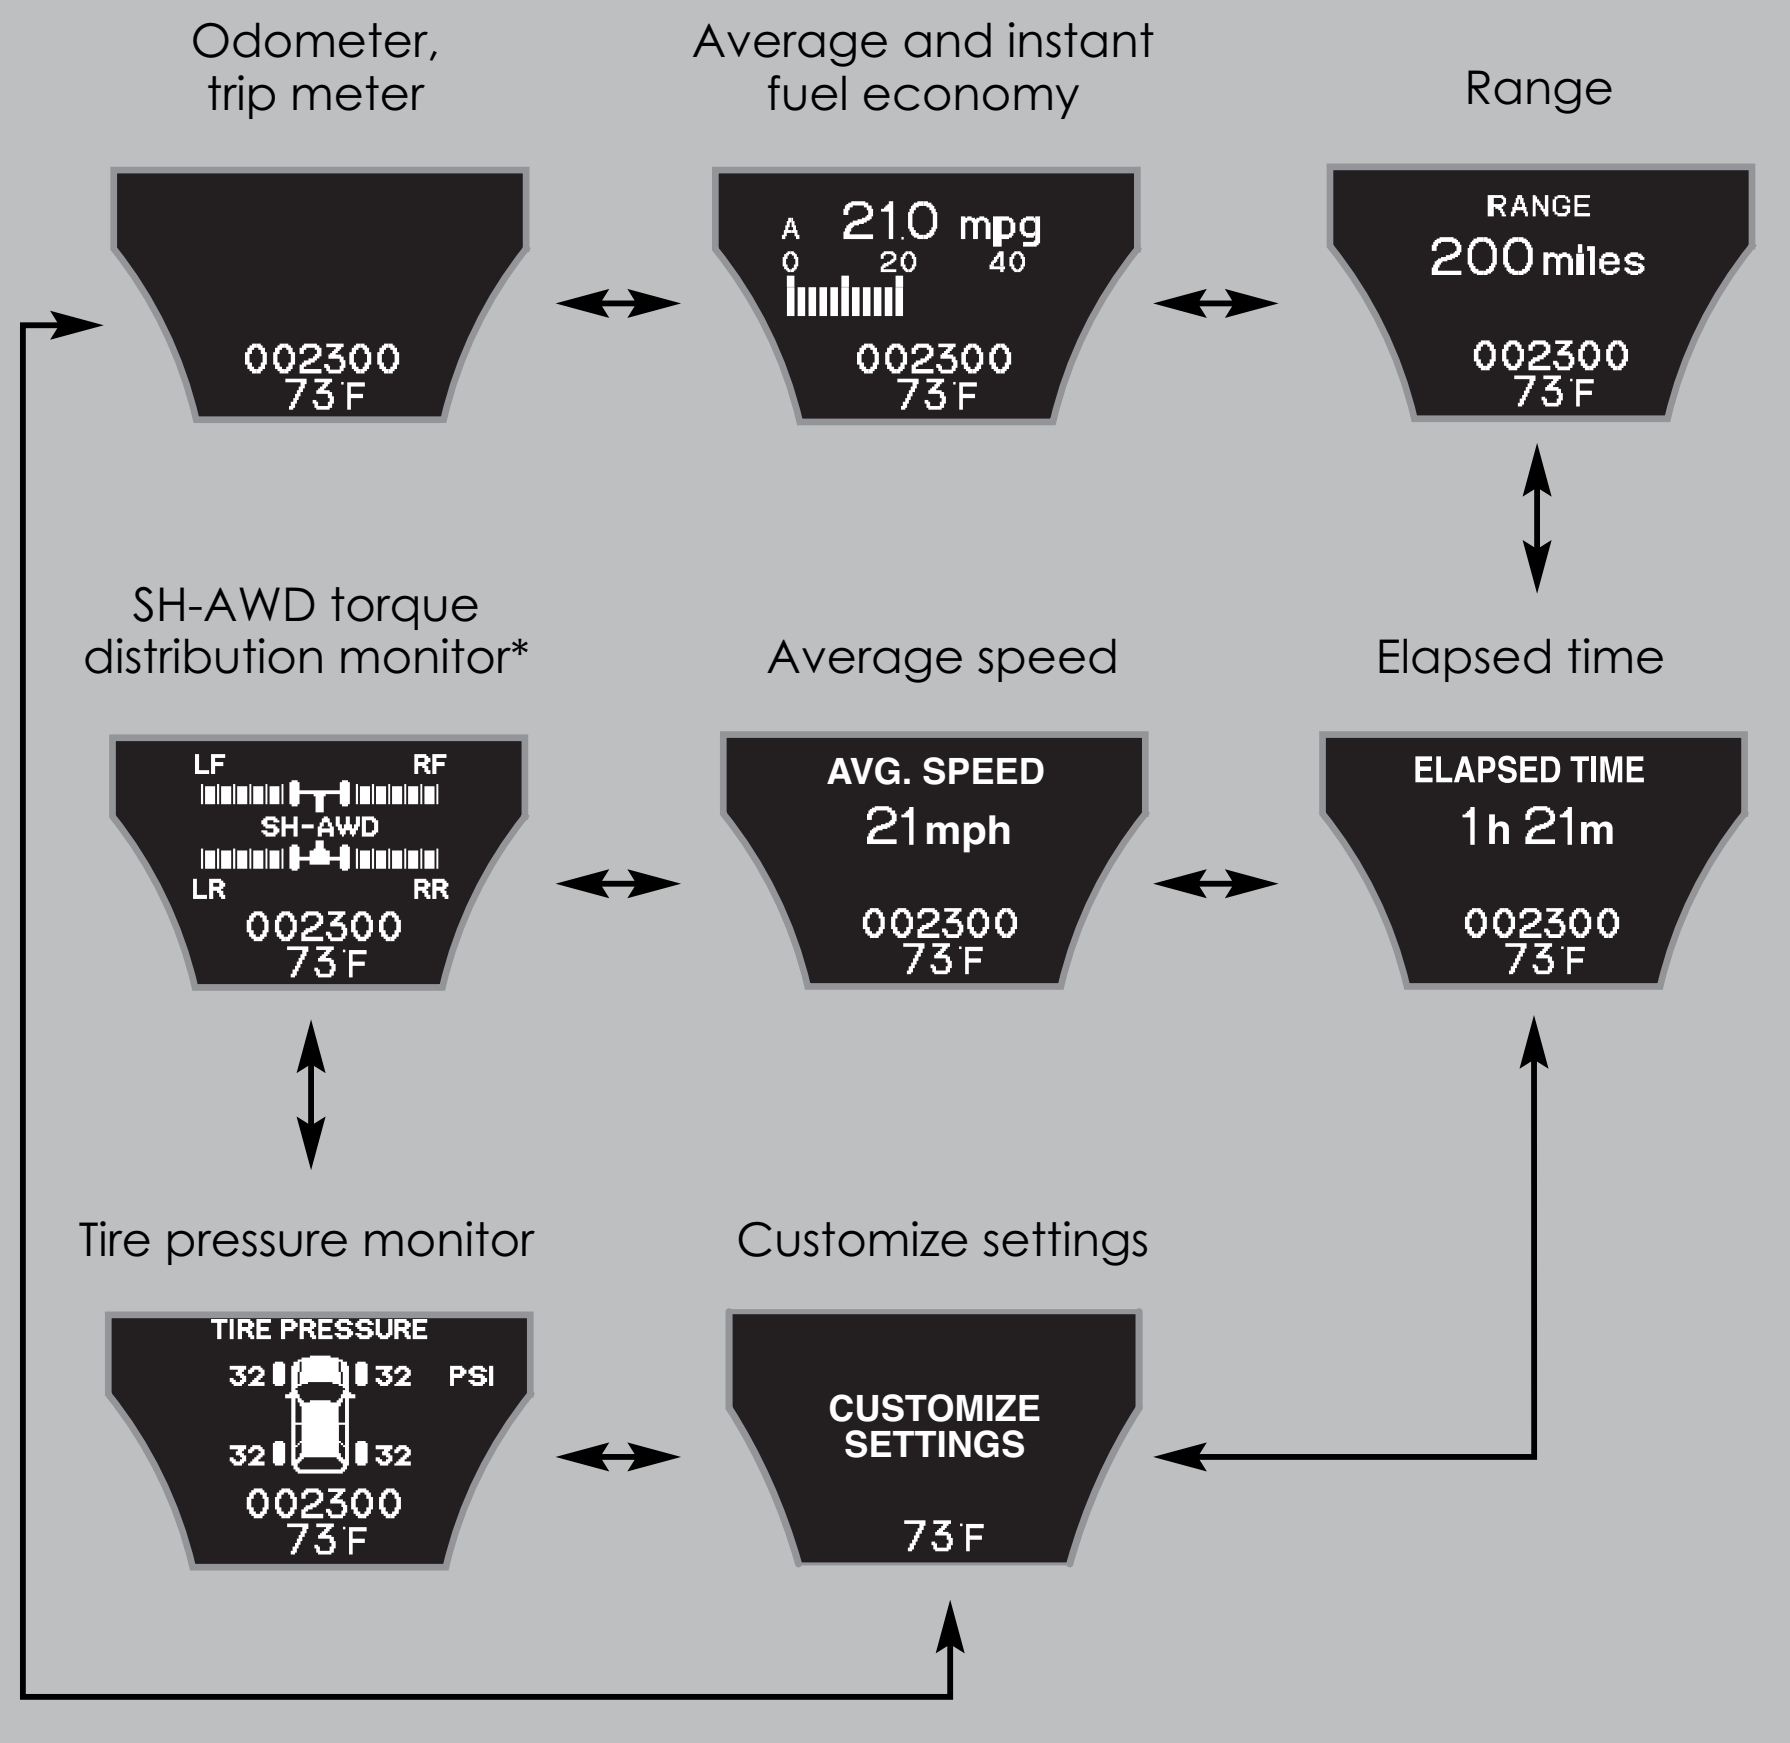

## Lower Displays

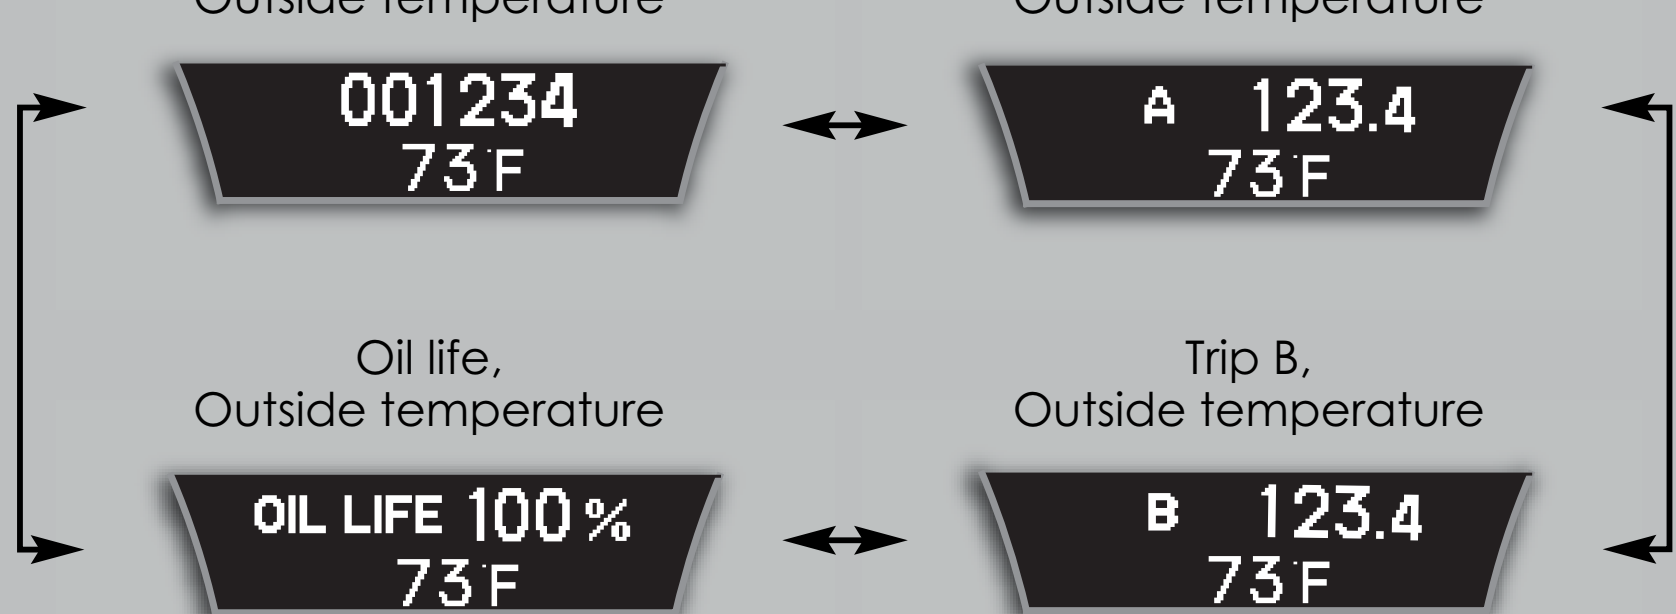


## Customizing Settings Using the MID

Five groups of settings can be programmed using the MID\*: Meter Setup, Position Setup, Keyless Access Setup, Lighting Setup, and Door Setup.

### Programming the Auto Door Unlock Setting



**Press** either Info button to toggle to the "Customize Settings" display, then **press** SEL/RESET to enter the menu.

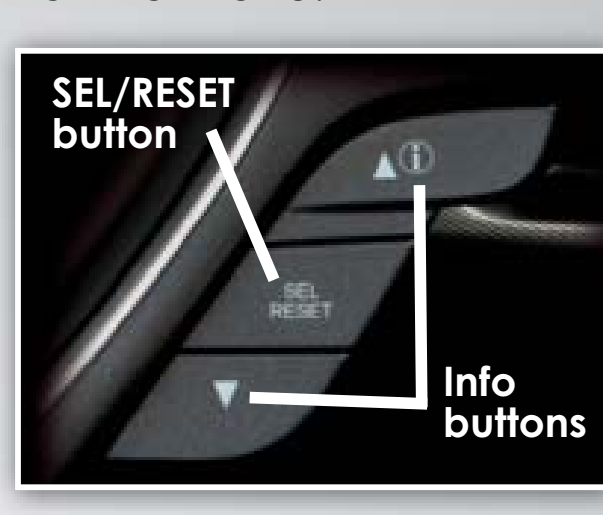

1. **Select** CHANGE SETTINGS.



4. **Select** ALL DOORS With SHIFT TO P.



2. **Select** DOOR SETUP.



5. Once the setting has been saved, **select** EXIT.



3. **Select** AUTO DOOR UNLOCK.



\* See "Customize Settings" in your Owner's Manual for other programmable settings.

# DRIVING POSITION MEMORY SYSTEM (DPMS)


Store driver's seat and side mirror positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

## Programming the DPMS


1. **Turn** the vehicle on. **Shift** into Park (P), or set the parking brake for manual transmission vehicles.




3. **Press** SET. You will hear a beep.

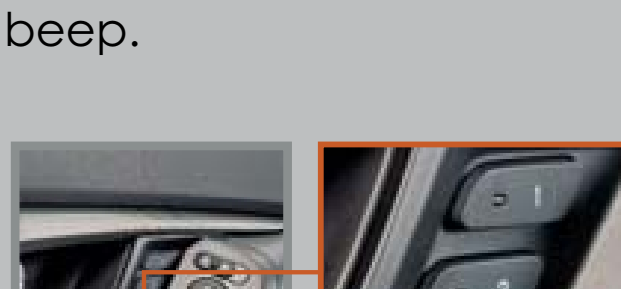

2. **Adjust** your preferred seat and outside mirror settings.

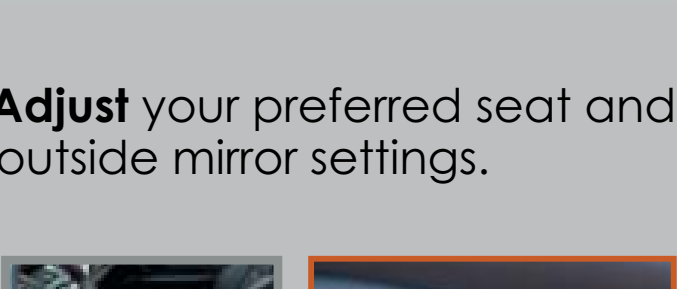

4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.

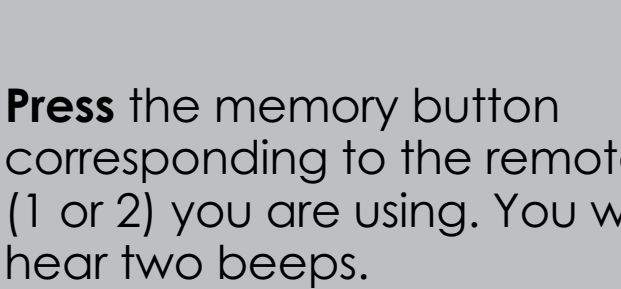

**Note:** Stored positions can also be recalled by pressing one of the memory buttons (1 or 2) on the door.

# REARVIEW CAMERA

For added convenience, the area behind your vehicle is displayed to help you navigate while backing up.

## How It Works

- When you shift into Reverse, a real-time image of the area behind your vehicle is shown in the navigation display.
- Yellow parking guidelines appear to help you judge distance.
- **Adjust** the screen brightness by turning the Interface Dial.
- The display turns off when you shift out of Reverse.

