

## Customizing Settings Using the MID


Four groups of settings can be programmed using the MID\*: Meter Setup, Position Setup, Lighting Setup, and Door Setup.

### Modifying the Auto Door Unlock Setting


As the default setting, only the driver's door unlocks when you shift to Park. Follow the steps below to set all doors to unlock when you shift to Park:



**Press and hold** either INFO button (▲/▼) to enter customization mode, then **press** SEL/RESET to enter the menu.

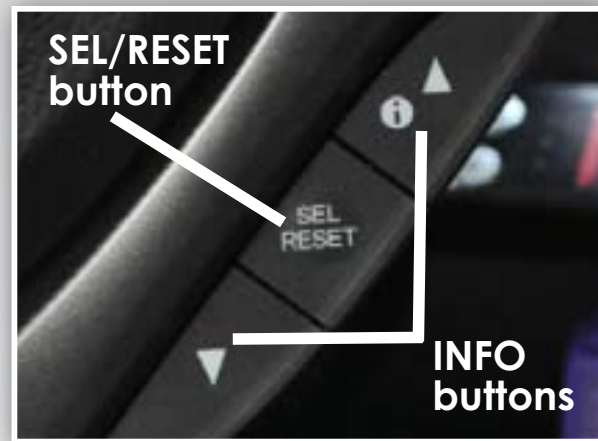


1. **Select** "CHG SETTING."

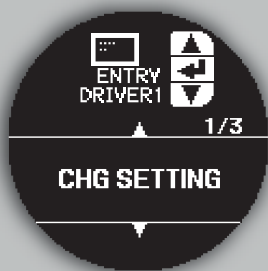

2. **Select** "DOOR SETUP."




3. **Select** "AUTO DOOR UNLOCK."

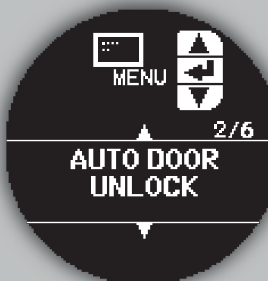

4. **Select** "ALL DOORS with SHIFT TO P."



5. Once the setting has been saved, **select** "EXIT."

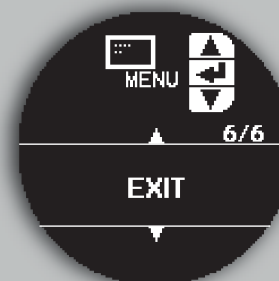

\* See Customized Settings in your Owner's Manual for other programmable settings.

## DRIVING POSITION MEMORY SYSTEM (DPMS)

Store driver's seat positions into memory for each corresponding keyless remote (1 or 2), which are recalled when you unlock the driver's door with the remote and enter the vehicle.

### Programming DPMS


1. **Turn** the ignition switch to ON (II). **Shift** into Park (P).




2. **Adjust** your preferred seat settings.



3. **Press** the SET button. You will hear a beep.

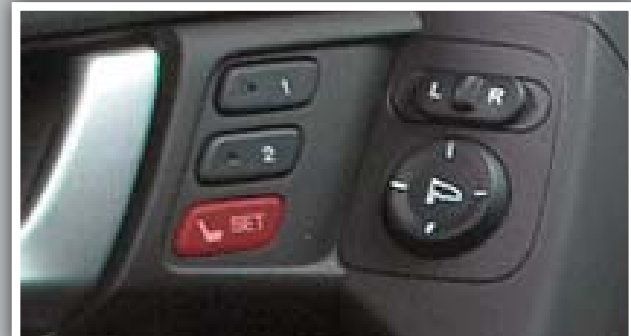

4. **Press** the memory button corresponding to the remote (1 or 2) you are using. You will hear two beeps.

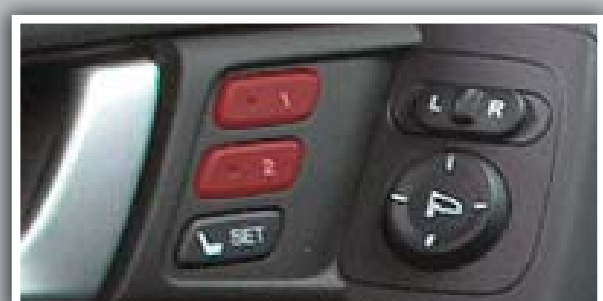

**Note:** Stored positions can also be recalled by pressing memory buttons (1 or 2) on the door.