

INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.



Automatic transmission vehicle shown

Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.



Charging system



Malfunction indicator lamp (check engine light)



Low brake fluid, Brake system



VSA® (Vehicle Stability Assist)



Low oil pressure



TPMS (blinks) (Tire Pressure Monitoring System)



SRS (Supplemental Restraint System)



EPS (Electric Power Steering)



ABS (Anti-lock Brake System)

Condition Indicators

Action is needed by driver.



Parking brake on: **Release**



Low fuel: **Refill**



Seat belt reminder: **Fasten seat belt(s)**



Low tire pressure (stays on): **Add air**



Door/trunk open: **Close door or trunk**



Immobilizer (blinks): **Use correct key**



Message indicator: **See MID**

On/Off Indicators



PASSENGER AIRBAG **OFF** (above audio panel)



Headlights **on**



SIDE AIRBAG **OFF**



Turn signals/hazards **on**



VSA **OFF**



Fog lights **on**



CRUISE MAIN **on**



High beams **on**



CRUISE CONTROL **on**