


# FUEL FILL DOOR

Easy-to-use locking fuel door keeps your fuel cap covered.

## Opening the Fuel Fill Door

When you unlock the driver's door with the master door lock switch or the remote transmitter, the fuel door unlocks.

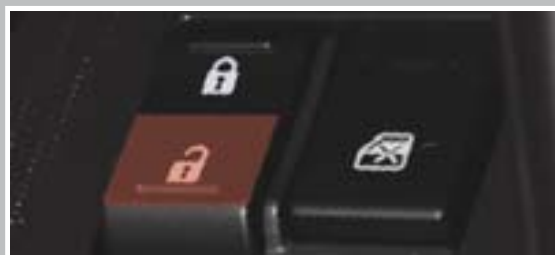

To open, **push and release** the fuel door in the area shown until it pops open.



## Closing the Fuel Fill Door

**Push** the fuel door until it is flush to the body.



When you **lock** the driver's door, the fuel door locks.

