










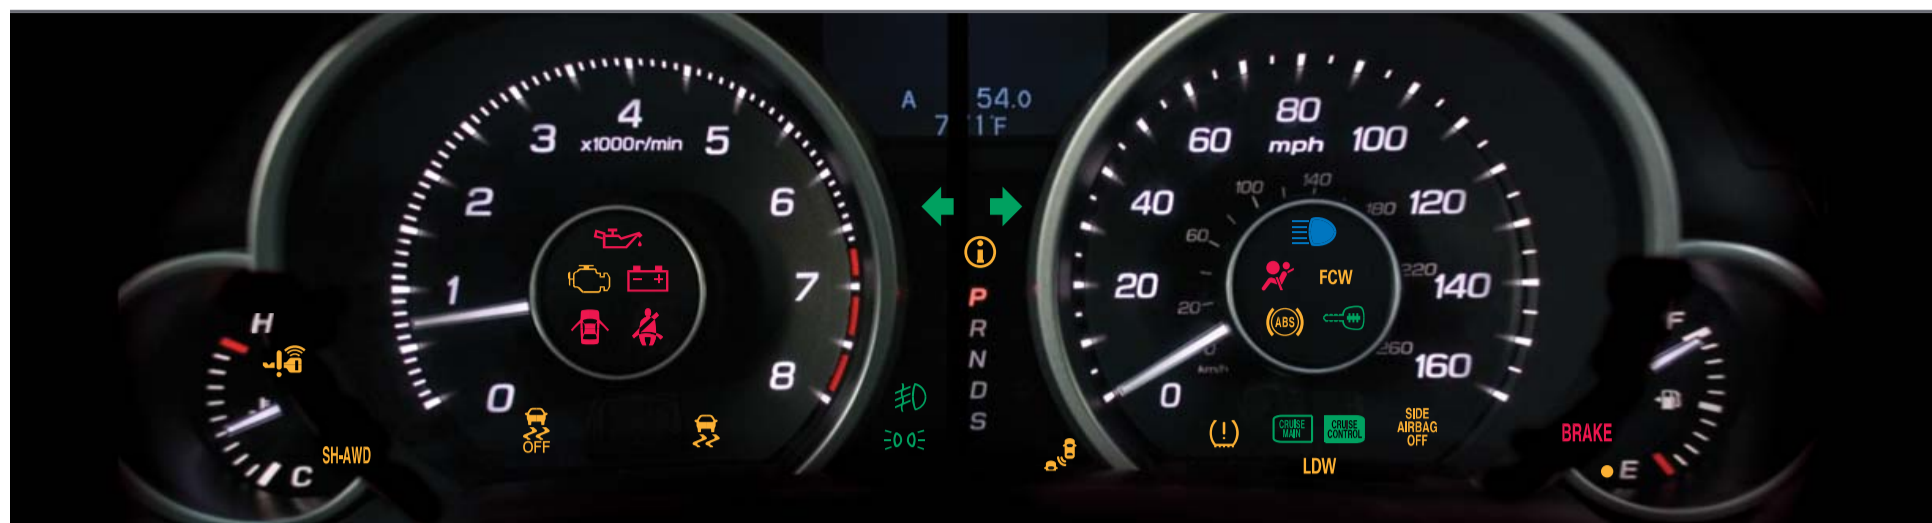




INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.












Malfunction Indicators

If an indicator remains on, there may be a problem; see your dealer.










	Charging system		SH-AWD (Super Handling All-Wheel Drive)
	Low brake fluid, Brake system		Malfunction indicator lamp (check engine light)
	Low oil pressure		VSA [®] (Vehicle Stability Assist)
	SRS (Supplemental Restraint System)		TPMS (blinks and stays on) (Tire Pressure Monitoring System)
	ABS (Anti-lock Brake System)		Blind Spot Information System
	FCW (Forward Collision Warning System)		Keyless Access System
	LDW (Lane Departure Warning System)		

Condition Indicators

Action is needed by driver.

	Parking brake on: Release		Message indicator: See MID
	Seat belt reminder: Fasten seat belt(s)		Low fuel: Refill
	Door/tailgate open: Close door or tailgate		Low tire pressure (stays on): Add air
	FCW (blinks): Brake		Immobilizer (blinks): Use other vehicle key
	LDW (blinks): Stay in your lane		

On/Off Indicators

	PASSENGER AIRBAG OFF (above audio panel)		Fog lights on
	SIDE AIRBAG OFF		Exterior lights on
	VSA OFF		Turn signals/hazards on
	CRUISE MAIN on		High beams on
	CRUISE CONTROL on		