



# INSTRUMENT PANEL INDICATORS

Briefly appear with each engine start. Red and amber indicators are most critical. Blue and green indicators are used for general information. See your Owner's Manual for more information.

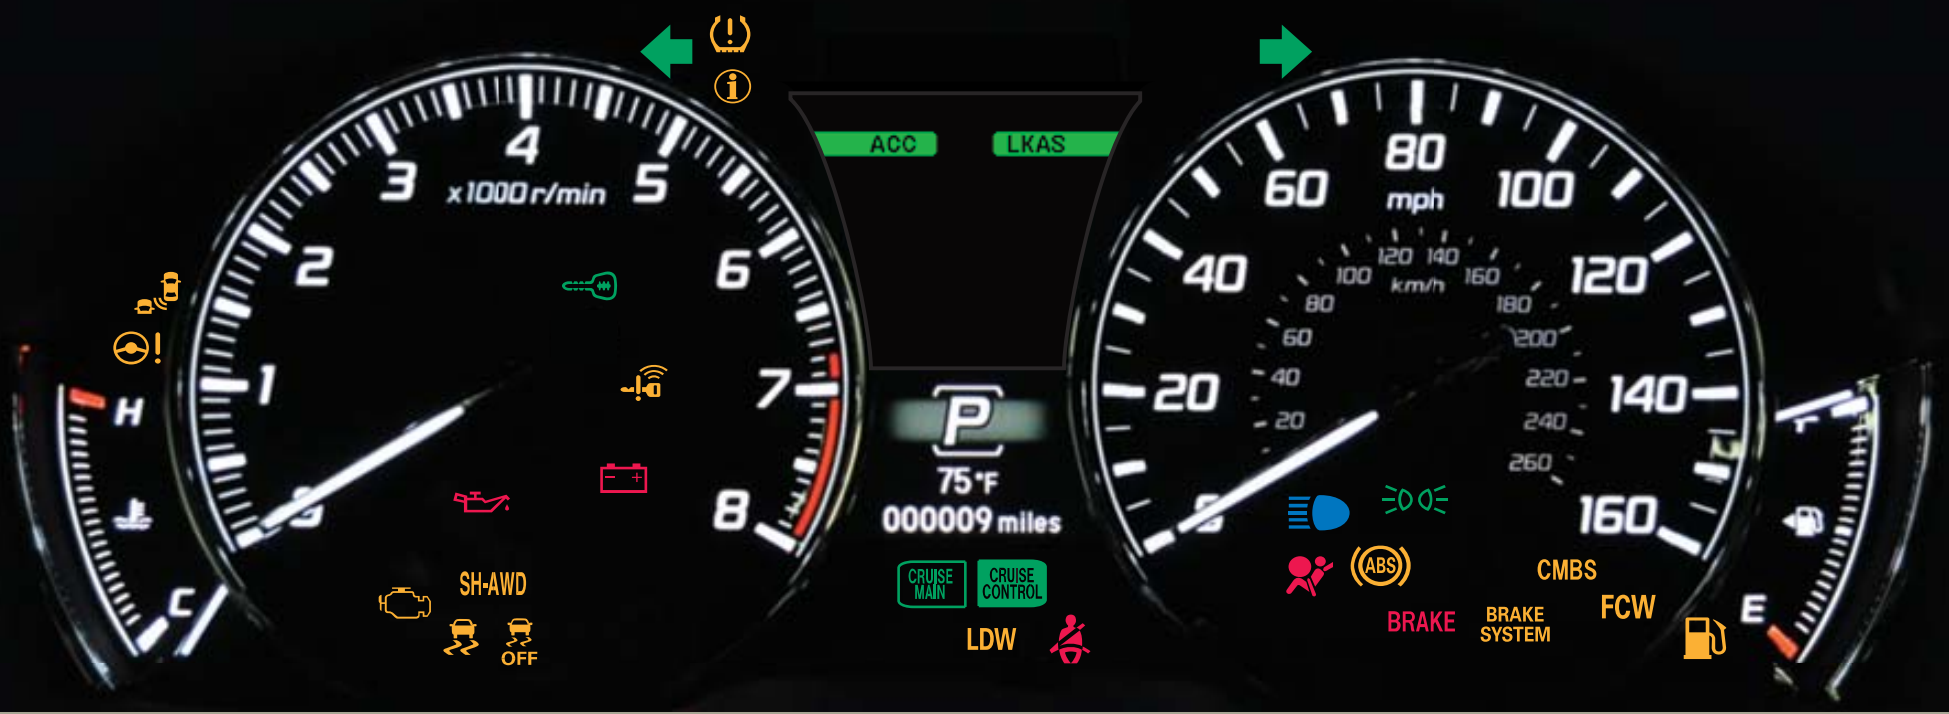


## Malfunction Indicators

 If an indicator remains on, there may be a problem; see your dealer.



Charging system

 

Malfunction indicator lamp (check engine light)



Low brake fluid, Brake system



Vehicle Stability Assist (VSA®)



Low oil pressure



Tire Pressure Monitoring System (TPMS) (*blinks*)



 
SRS (Supplemental Restraint System)



Collision Mitigation Braking System (CMBS)\*



ABS (Anti-lock Brake System)



Blind Spot Information (BSI)\*



Keyless Access System



Brake system (hydraulic)



Electric Power Steering



Lane Departure Warning (LDW)\*



Forward Collision Warning (FCW)\*



Super Handling All-Wheel Drive (SH-AWD)\*

## Condition Indicators

 
Action is needed by driver.



Parking brake on:  
Release



Message indicator:  
See MID



Seat belt reminder:  
Fasten seat belt(s)



Low fuel:  
Refill



Low tire pressure (*stays on*):  
Add air



Immobilizer (*blinks*):  
Use other vehicle key and see dealer


## On/Off Indicators



 PASSENGER AIRBAG OFF  
(next to display)




BSI\* off



VSA OFF



 CMBS\* off




CRUISE MAIN on



Exterior lights on



 CRUISE CONTROL on



Turn signals/hazards on



FCW\* off



High beams on



Adaptive Cruise Control\* on



Lane Keeping Assist System\* on

\*if equipped